



Denver DWC-8475

denver.eu

January 2026



**FR**

Cet appareil,  
ses accessoires  
et ses batteries  
sont recyclables

À DÉPOSER  
EN MAGASIN



ou

À DÉPOSER  
EN DÉCHÈTERIE



Points de collecte sur [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)  
Privilégiez la réparation ou le don de votre appareil !

Denver A/S reserves the rights for print errors

Denver A/S cannot be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without prior notice. If you detect any inaccuracies or omissions, please inform us at the address on the back cover.


## Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.


1. Warning: This product includes lithium polymer battery.
2. Do not crush and do not expose the battery pack to any shock or force such as hammering, dropping or stepping on it.
3. Do not short circuit and do not allow metal objects to come into contact with the battery terminals.
4. Do not exposure to heat, water, moisture or direct sunlight!
5. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop using it immediately.
6. Product operating and storage temperatures are from 0 degree Celsius to 40 degrees Celsius. Under and over this temperature might affect the function.

7. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
8. Only charge with supplied USB cable.
9. Do not use non-original accessories together with the product as this can make the product functionality abnormal.

## Product overview

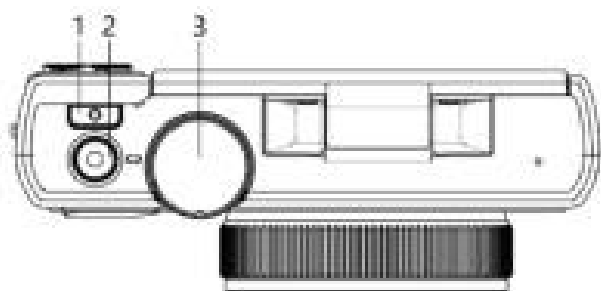


Top side view

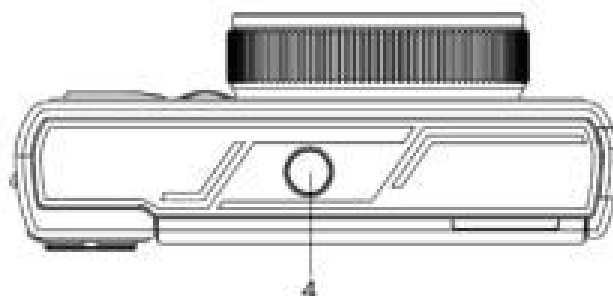


Bottom side view

Left side view

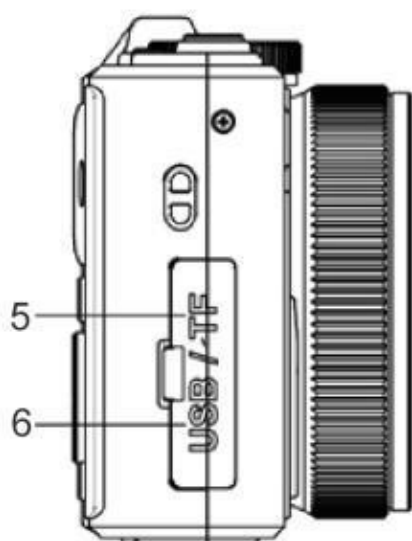


Right side view

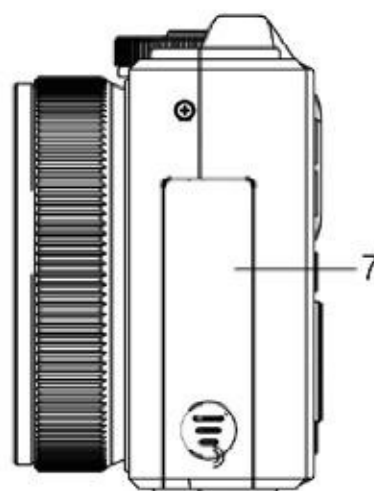


| Buttons/ Indicators    | Functions                                            |
|------------------------|------------------------------------------------------|
| 1. POWER               | Power on / off                                       |
| 2. PHOTO               | Take photo                                           |
|                        | Pause of recording                                   |
| 3. Mode dial           | Switch shooting mode                                 |
| 4. Tripod hole         |                                                      |
| 5. Memory card slot    |                                                      |
| 6. Type-C USB input    | For charging. Connect to the computer with USB cable |
| 7. Battery compartment |                                                      |

Front view

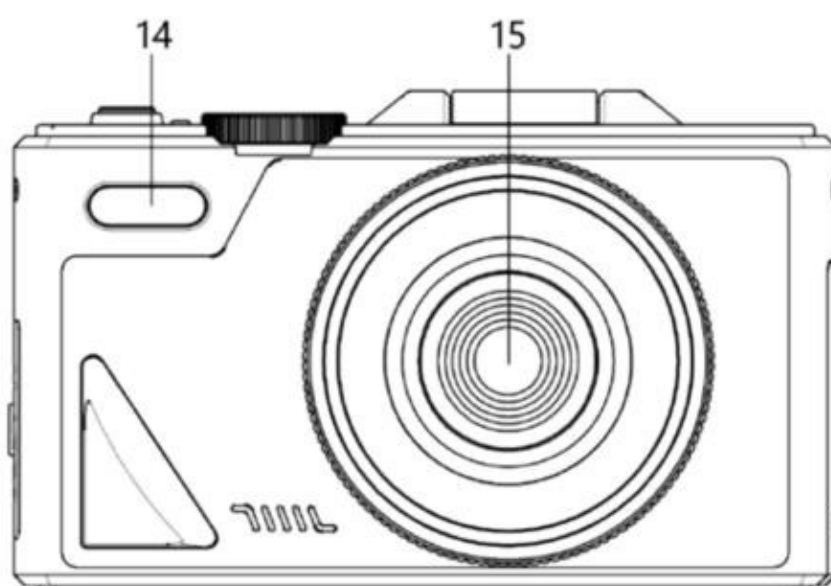

Rear view

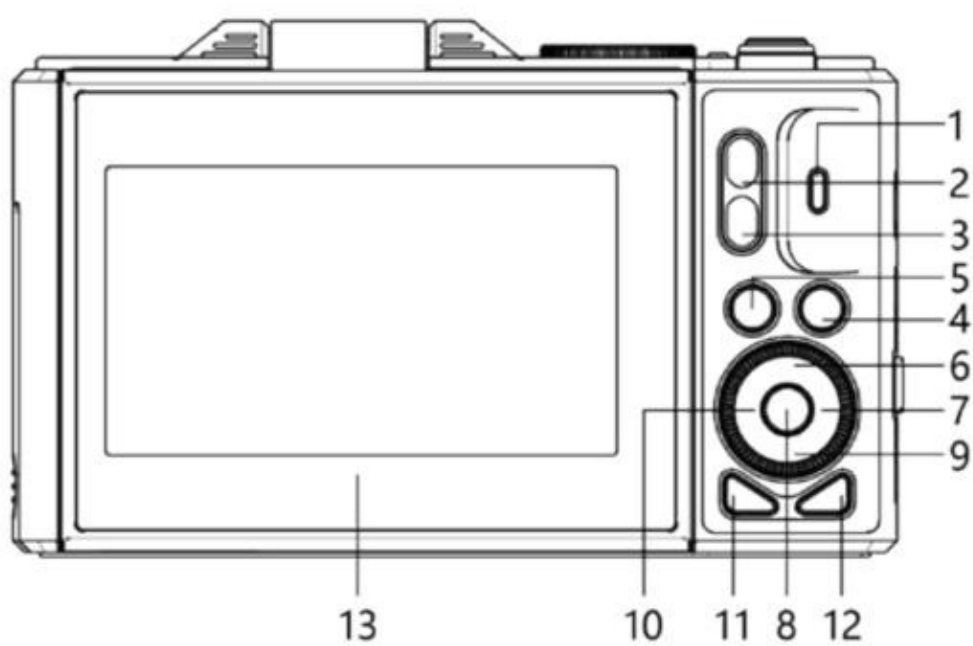


| Buttons/ Indicators |                 | Functions                          |
|---------------------|-----------------|------------------------------------|
| 1.                  | Indicator light | Working / Charging indicator light |
| 2.                  | T               | digital zoom in                    |
| 3.                  | W               | Digital zoom out                   |
| 4.                  | Trash bin       | Delete                             |
| 5.                  | Playback button | Open/Exit Media Playback           |
| 6.                  | Up              | Upward                             |
|                     |                 | Shortcut to turn on/off the flash  |
| 7.                  | Right           | Rightward<br>Change filter         |
| 8.                  | OK              | Confirm                            |
| 9.                  | Down            | Downward                           |
|                     |                 | Delete photo/video                 |
| 10.                 | Left            | Leftward<br>Change Filter          |
| 11.                 | DISP            | Turn on/off the display            |
| 12.                 | MENU            | Open / Close menu settings         |
| 13.                 | Display screen  |                                    |


|           |  |
|-----------|--|
| 14. Flash |  |
| 15. Lens  |  |

## Charging the battery

1. Power off your camera, open the battery cover, and insert the battery in the direction shown in the following picture, then close the battery cover.
- 2.

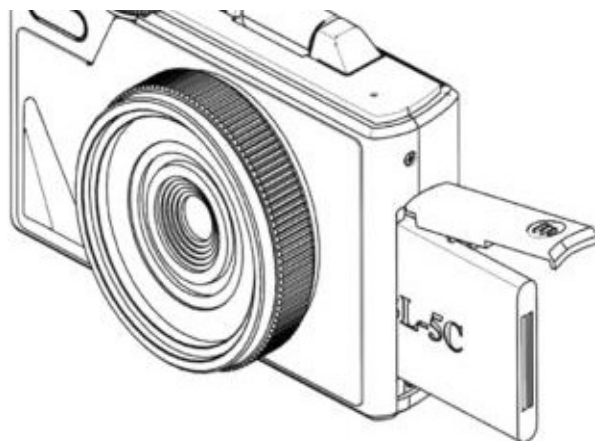

3. You can use the supplied USB cable to charge your camera via an adapter (5V/1A~5V/2A) .

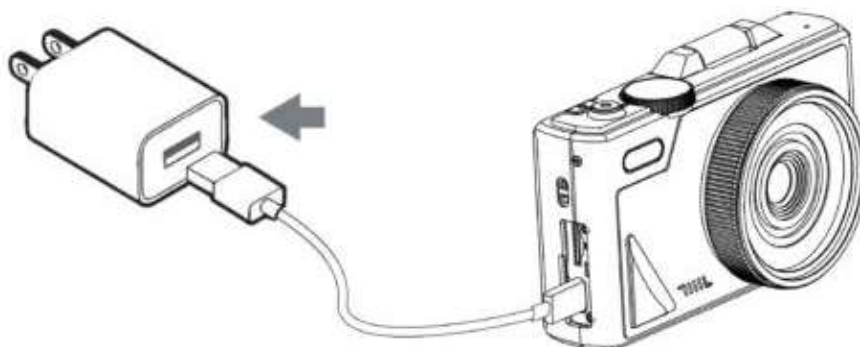

When charging the light will turn red. When fully charged the light will turn off automatically.

Normally it takes around 2 hours to fully charge the battery.

When the battery is fully charged, the battery life is around 60 minutes for recording.

Power on/off the camera

Press the power button, the camera will turn on automatically.


To turn off the camera, press and hold the power button for 3 seconds.

Note: When you turn on the camera for the first time or have removed the battery, you need to press and hold the power button to turn it on.

Set the camera

After the camera is turned on, press the menu button to open the menu settings.

### Menu setting

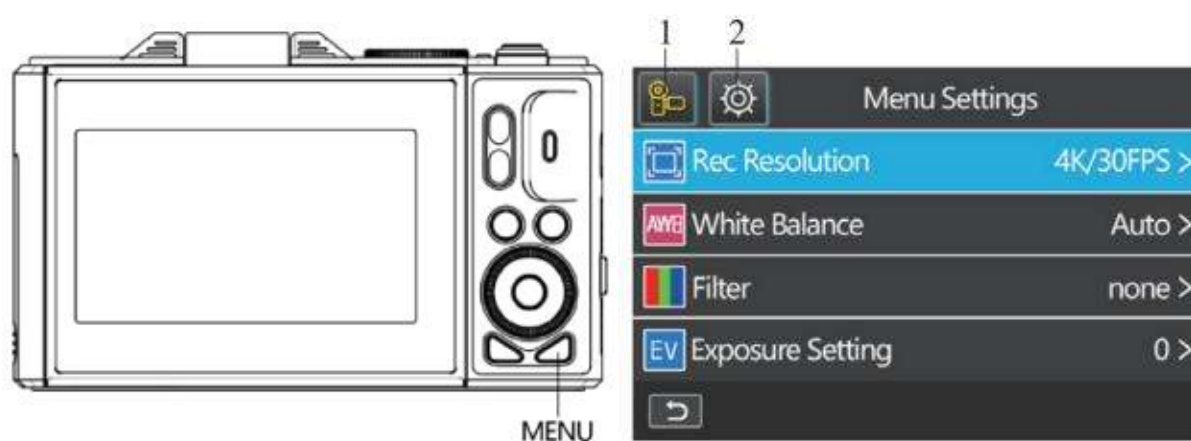

1: Sub-menu for current mode


2: System settings

Here you can change the settings for the current camera mode and the system settings.

## Insert and format the memory card

A class 10 or higher speed memory card is recommended for normal use.

1. Insert the memory card into the memory card slot until you hear a "click".

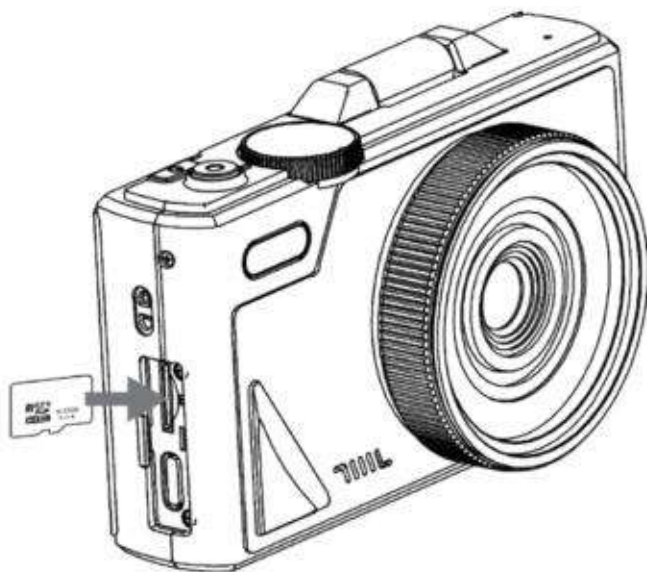

Insert the memory card in the direction shown in the diagram, paying attention to the edges and corners.

2. To remove the memory card: Push the memory card in and it will automatically pop out.

## Format the memory card

It is recommended to format the memory card before the first use.

To format the memory card, press the menu button to open the menu settings. Then go to system settings. Press to find "Format" and press OK to get the sub-menu. Select "Format" to format the memory card.

Note: If the memory card is not native format, the screen will pop-up a prompt:

“Unsupported file system, do you want to format? ”

Please format the memory card as above.

Formatting the memory card will erase all the data stored on it and the data will be irrecoverable. Save your important data on PC before formatting.

Using the camera

After the camera is turned on, you can select through 9 camera modes.



Rotate the mode dial to select the desired mode.


Note: The camera supports setting for the corresponding mode in different modes. After selecting the desired mode, press the menu button to open the menu settings and select the desired settings.

| icon                                                                                | Mode  | illustrate                                                          |
|-------------------------------------------------------------------------------------|-------|---------------------------------------------------------------------|
|  | Photo | Take a single photo normally                                        |
|  | Auto  | Automatically cycle take photos after a specified number of seconds |

|                                                                                     |             |                                                                                                                            |
|-------------------------------------------------------------------------------------|-------------|----------------------------------------------------------------------------------------------------------------------------|
|    | Timed       | Take a single photo after a specified number of seconds<br>(The number of seconds can be changed in the sub.menu settings) |
|    | Burst       | Take a specified number of photos in succession                                                                            |
|    | Video       | Normal recording mode                                                                                                      |
|    | Slowly      | Slow motion shooting                                                                                                       |
|  | Lapse       | Compress time to record video                                                                                              |
|  | Loop        | Recording infinite loop                                                                                                    |
|  | Video+Photo | During the recording video, you can capture<br>according to the set capture interval single photo                          |

Press the photo button to take a photo, and the photo will be automatically saved to the memory card.

In video recording mode, press the photo button to start recording, and then press again to end recording. You can also press the power button to pause/continue recording while recording.

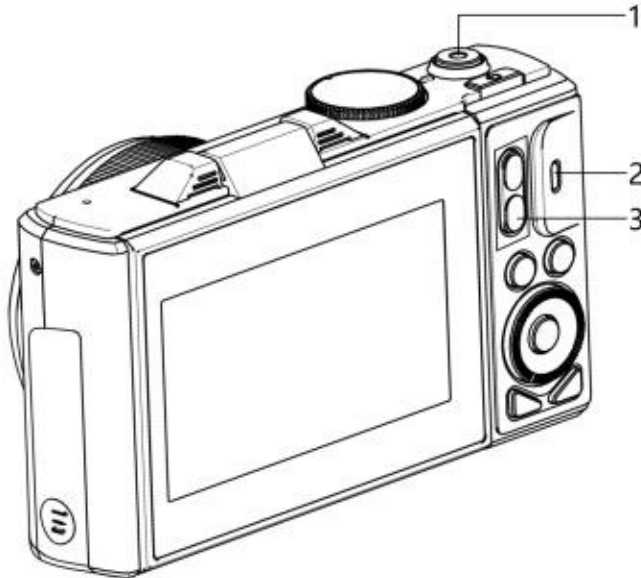

1: Photo button (video start/end button)

Press to start recording, then press to end recording

2: Indicator light

The working indicator light flashes when recording

3: Digital zoom button

T button digital zoom in/W button digital zoom out

## Focus function

This function includes 3 focus modes: automatic focus/manual focus mode/fixed focus. Press menu button to open the menu settings, then press the left/right button to switch to system settings, press to find "Focus Mode", press OK button to enter focus mode. Select the mode you need.

### Fully automatic focus

In this mode, you only need to keep the camera steady when taking pictures or videos, and the camera will automatically focus. Once done, press the capture button.

### Manual focus

In this mode, when taking a photo or recording a video, half-press the photo button and the focus frame will appear on the display until the camera focuses clearly.

Then press the photo button all the way down to take the photo or start recording with the clearest image.

### Fixed focus

In this mode, you need to press the shooting button halfway to focus when taking

pictures or videos, and the screen will clearly show the image of the object being

shot, and then press the shooting button to the end. If you release the shooting button to take pictures or record videos, the pictures and videos will not be clear.

### Flashlight

In video mode, pressing the up button can quickly turn on or off the flashlight.

In photo mode, the flashlight has three flash modes and pressing the up button can quickly switch between the three modes.

|                                                                                   |                 |
|-----------------------------------------------------------------------------------|-----------------|
|  | No flash        |
|  | Auto flash      |
|  | Mandatory flash |

Note: When the flashlight is in automatic flash mode, it will only flash when taking photos in a dark environment. When switched to forced flash mode, the flashlight will always be on.

## Playback

Press the playback button to enter the media library. Select the video or photo file


you want to view, then press the OK button to enter the corresponding file to view the video and image stored in the camera memory card.

Current/total number of images



Figure 1: Video playback

Figure 2: Photo

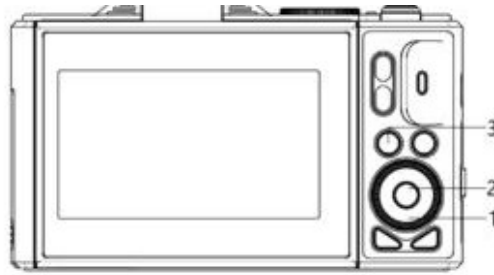

1: Press the trash bin button to delete a photo/video.


Note: Once deleted, it cannot be recovered.

2: Press the OK button to play/pause the video

3: Press the playback button to exit video/photo playback

## Connect to computer

1. Connect the Type-C USB port of the camera and the USB port of the computer with supplied USB cable.

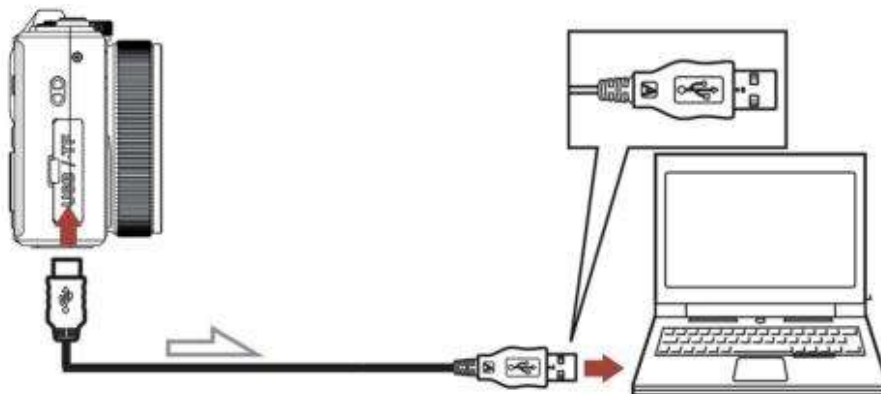

2. The camera will turn on automatically, and the screen will display the available options; Charging mode, Mass storage mode, PC mode-

Press the Up/Down button to select the desired option, then press the OK button to

confirm the option.

## Charging Mode

Select the charging mode; the camera supports the function of recording normally. Power off the camera would be fully charged faster than keeping the power on.

## Mass Storage Mode

Select "Mass Storage Mode" and the computer will display the camera's

memory card drive. You can transfer files from the storage to the computer.

## PC Camera

Select the "PC Camera" mode, the camera can be used as a webcam, live streaming, etc.

Note: When the camera is used as a webcam, only the digital zoom button can be operated on the camera and other functions cannot be used.

## WIFI and APP User Guide

Press the MENU button to enter the menu, press the left/right button to enter the

system settings, then press the up/down button to find the "WIFI", and use the left/right to turn on/turn of the WIFI, confirm with the OK button. To download the WIFI app, scan the right QR-code below

To use the App User guide Press the MENU button to enter the menu, press the left/right button to enter the system settings, then press to find the "APP User Guide", scan the QR-code on the camera or scan the left QR-code below.



WIFI APP User Guide QR Code



WIFI APP Download QR

## Camera cleaning and maintenance

(1) If you do not use the camera for a long time, take out the camera battery and place it in a dust-free, dry environment with a temperature no higher than 30 °C.

(2) In order to extend the service life of the battery, please discharge it completely before storage.

(3) Please fully discharge the battery at least once every 3 months after it has been fully charged.

(4) If there is dust or dirt on the lens or screen, gently wipe it with a clean, soft lens cleaning cloth.

(5) As this machine is a precision instrument, please do not drop it or suffer from strong impact or vibration.

### Troubleshooting:

If you encounter problems with the camera, please refer to this section.

#### 1. The camera cannot be turned on after installing the battery

(1) The battery power is insufficient, please replace the battery with a new one or charge the battery.

(2) The battery is installed in reverse, please confirm that the battery is installed in the correct way.

(3) The battery insulating paper is not removed.

#### 2. The battery is not charging

(1) If the red light of the charging indicator flashes, the battery is not in place or the contact is poor. Please re-install the battery until the indicator light is on (the indicator light goes out when the battery is fully charged)

(2) The charging indicator light is off and the charger is not plugged in properly. Please check whether the charger is connected normally.

(3) The ambient temperature is lower than 10°C, which may lead to slow charging or failure to charge.

### 3. Camera crashes

Quickly pressing each button of the camera may cause the camera to freeze. After it crashes, unplug the battery and reboot.

Tip: When the camera is recording or taking pictures, do not quickly press the camera button. Under normal circumstances, the camera will display a waiting icon.

### 4. The memory card cannot be recognized:

(1) Please check whether the memory card complies with Micro SD card (class10),

(2) Please check whether the memory card is inserted backwards.

(3) When the memory card is used on the camera for the first time, it is recommended to format it first.

### Additional notes

(1) Do not insert any object into the slot except the memory card.

(2) After the power is turned on, the camera may show an unstable image for a few seconds, but this is not a fault.

(3) Due to the optical properties of the lens, there may be color dispersion

(magnification of chromatic aberration) at the edges of the image. This is not a

camera fault.

(4) It is normal for the memory card to get hot after a long period of use.

(5) It is normal for the camera's screen to heat up after a long period of use.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.


All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type DWC-8475B is in compliance with Directive 2014/53/EU. The full text of the RED declaration of conformity is available at the following internet address: [denver.eu](https://denver.eu) and then click the search ICON on topline of website. Write model number: DWC-8475B. Now enter product page, and RED directive is found under downloads/other downloads. Alternatively, the QR code below can be scanned and the file can be accessed directly.

Hereby, Denver A/S declares that this connected device is in compliance with Data Act Regulation (EU) 2023/2854. The Data Act (EU) 2023/2854 product data sheet is available at the following internet address: [denver.eu](https://denver.eu) and then click the search ICON on topline of website. Write model number: DWC-8475B. Now enter product page, and the Data Act (EU) 2023/2854 product data sheet is found under downloads/other downloads. Alternatively, the QR code below can be scanned and the file can be accessed directly.

Information on standby/off mode power consumption and power management for products compliant with Commission Regulation (EU) 2023/826 can be found at the following internet address: [denver.eu](https://denver.eu) and then click the

search ICON on topline of website. Write model number:  
DWC-8475B and enter the page.

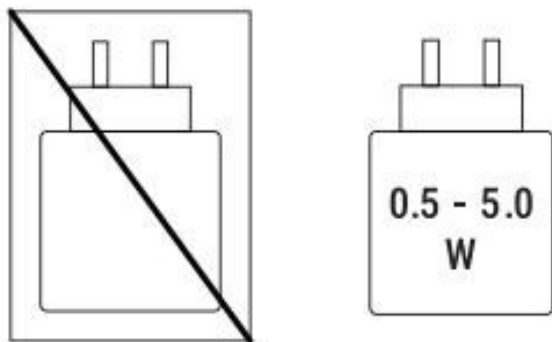

Operating Frequency Range: Wi Fi 2.412 – 2.472GHz

Max Output Power: 36dBm

DENVER A/S

Omega 5A, Soefte

DK-8382 Hinnerup

Denmark

[www.denver.eu](http://www.denver.eu)

[www.facebook.com/denver.eu](https://www.facebook.com/denver.eu)