


# MDA-250

## Wooden CD/DAB Music Centre

### Quick Start Guide

#### Front Panel & Location of Controls

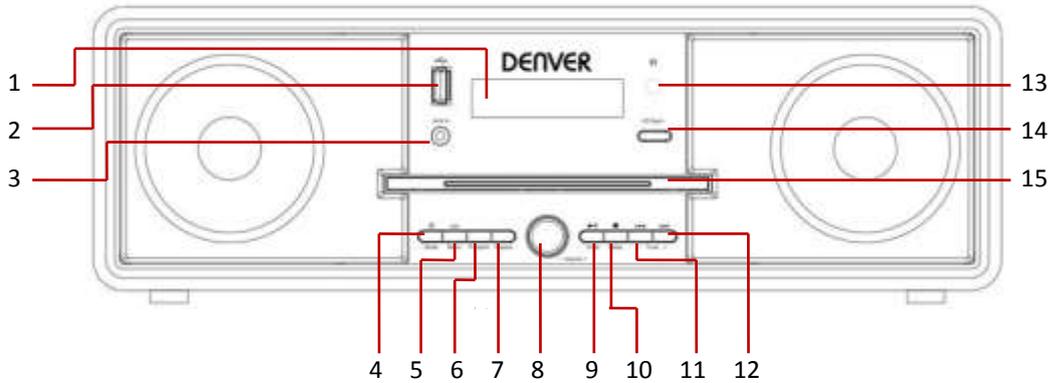

- |                     |                            |                                 |
|---------------------|----------------------------|---------------------------------|
| 1. LCD Display      | 6. Program Button          | 11. Skip Backward/Tune - Button |
| 2. USB Port         | 7. Repeat Button           | 12. Skip Forward/Tune + Button  |
| 3. AUX In           | 8. Volume +/-Rotary Knob   | 13. IR Sensor                   |
| 4. /Mode Button     | 9. Play/Pause/Enter Button | 14. CD Eject Button             |
| 5. Info/Menu Button | 10. Stop/Sleep Button      | 15. CD Door                     |

#### Remote Control

- |    |                         |
|----|-------------------------|
| 1. | 10. Mode                |
| 2. | 11. Repeat              |
| 3. | 12. Skip Forward/Tune + |
| 4. | 13. Alarm               |
| 5. | 14. Volume +            |
| 6. | 15. Volume -            |
| 7. | 16. X-Bass              |
| 8. | 17. Preset/Folder +     |
| 9. | 18. Mute/Snooze         |

#### Bluetooth

The Bluetooth pairing name for this unit is MDA-250.

To activate your Bluetooth music streaming function, first search for this BT name on your mobile, then select and confirm the pairing.

# MDA-250

## Wooden CD/DAB Music Centre

### Quick Start Guide

#### Switching Your Unit On For The First Time

1. Fully extend the wire antenna and plug it into the ANT socket.
2. Connect the AC Mains cable to the appropriated AC mains socket.
3. Press the  /**Mode** button once to turn the system on, it will automatically enter into the DAB mode and perform auto scan, after the scan has finished, the first alphanumerically found station will be selected and you can now start to operate your music centre.
4. To select other modes, repeatedly press the  /**Mode** button.

#### Clock Setting

During unit standby, press and hold the **Info/Menu** button until “Clock set” is displayed, then press the  button to enter “Clock set”, and you can now select “Auto sync” or “Manual set” - repeatedly press the  or  button followed by pressing the  button again to confirm your selection.

When “Auto sync” is selected, the clock will be automatically updated by the broadcasted information, it is not necessary to set the clock manually.

#### DAB Autotune & Manual Tune

Press and hold the **Info/Menu** button to enter into the “DAB menu” to select “Autotune” or “Manual tune”. When “Autotune” is activated, it will scan for the entire DAB Band III channels and after the scan has finished, the first alphanumerically found station will be automatically selected. To explore and select listening to other found stations, press the  or  button followed by pressing the  button.

When “Manual tune” is selected, press the  or  button to move through the DAB channels (5A – 13F), when your desired channel appears in the display, press the  button to confirm.

#### Storing and Recalling Stored Stations

In either DAB or FM mode, you can store up to 20 stations into the station presets; this will enable you to get direct access to your favourite stations.

1. To store a preset, first tune to your desired station, then press and hold the **Program** button until the display shows the preset number and flash.
2. Repeatedly press the  or  button to select your desired station preset number, then press the **Program** button again to confirm.
3. Repeat the above procedure to store more stations into the station presets.
4. To recall a preset station, first press on the **Program** button once, then press the  or  button to scroll up or down the presets that you have stored, when you see your desired preset number in the display, press the  button. Or you can press the **Preset +** or **Preset -** button on the remote control to recall the presets directly.

**MDA-250**  
**Wooden CD/DAB Music Centre**  
**Quick Start Guide**

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

**DENVER®**

[www.denver-electronics.com](http://www.denver-electronics.com)



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type MDA-250 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address.

Please enter: [www.denver-electronics.com](http://www.denver-electronics.com) and then click the search ICON on topline of website.

Write model number: MDA-250

Now enter product page, and red directive is found under downloads/other downloads.

Operating Frequency Range: 2402-2480MHz Max Output Power: 14dBm

Imported by:

DENVER ELECTRONICS A/S

Omega 5A, Soefte DK-8382 Hinnerup

Denmark

[facebook.com/denverelectronics](https://facebook.com/denverelectronics)