



AEG

Instruction Book

ERGOMINI

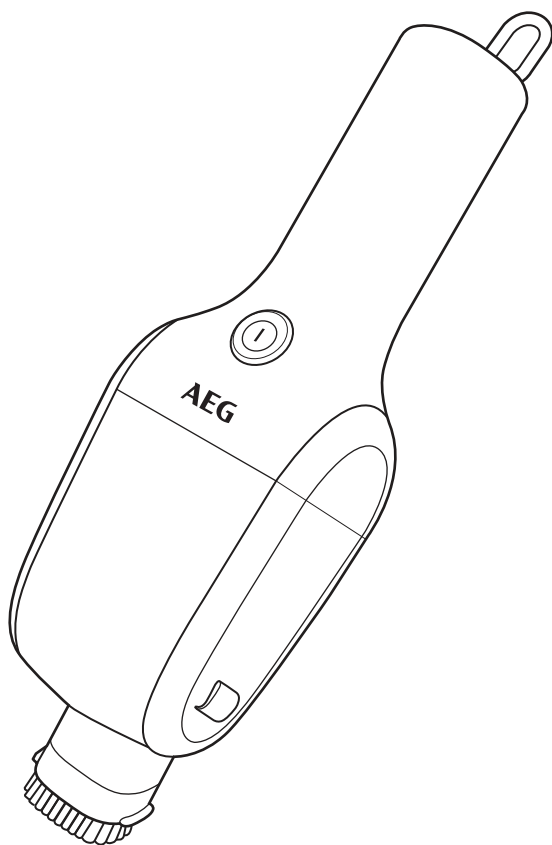

*Actual product may differ from illustration.

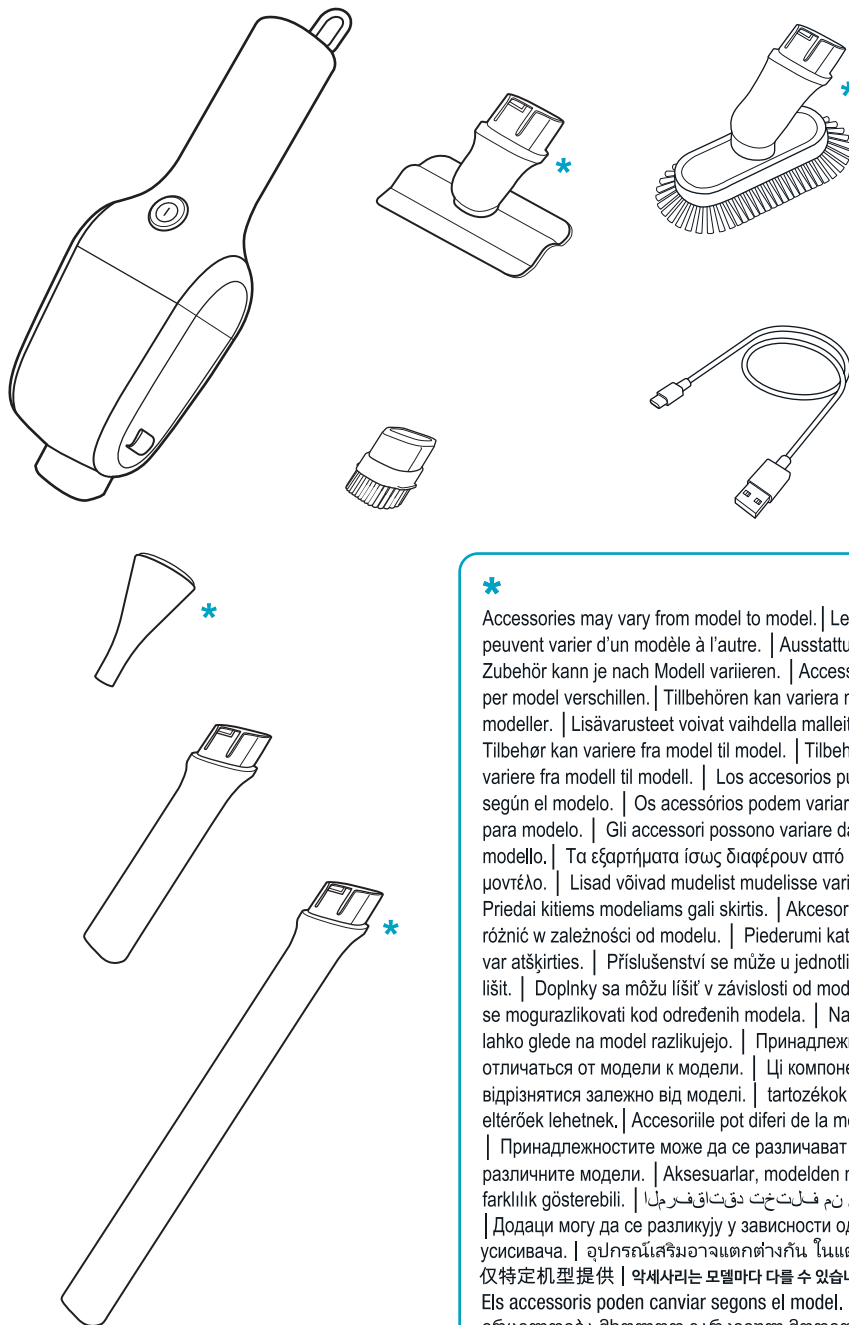

Accessories may vary from model to model. | Les accessoires peuvent varier d'un modèle à l'autre. | Ausstattung und Zubehör kann je nach Modell variieren. | Accessoires kunnen per model verschillen. | Tillbehören kan variera mellan olika modeller. | Lisävarusteet voivat vaihdella malleittain. | Tilbehør kan variere fra model til model. | Tilbehør kan variere fra modell til modell. | Los accesorios pueden variar según el modelo. | Os acessórios podem variar de modelo para modelo. | Gli accessori possono variare da modello a modello. | Τα εξαρτήματα ίσως διαφέρουν από μοντέλο σε μοντέλο. | Lisad võivad mudelist mudelisse varieeruda. | Priedai kitiems modeliams gali skirtis. | Akcesoria mogą się różnić w zależności od modelu. | Piederumi katram modelim var atšķirties. | Příslušenství se může u jednotlivých modelů lišit. | Doplnky sa môžu líšiť v závislosti od modelu. | Dodaci se mogurazlikovati kod određenih modela. | Nastavki se lahko glede na model razlikujejo. | Принадлежности могут отличаться от модели к модели. | Ці компоненти можуть відрізнятися залежно від моделі. | tartozékok típusonként eltérőek lehetnek. | Accessoriile pot diferi de la model la model. | Принадлежностите може да се различават според различните модели. | Aksesuarlar, modelden modele farklılık gösterebilir. | إدخال لي دوم نم فلت خت دقت اق فرملا. | Додаци могу да се разликују у зависности од модела усисивача. | ഉപകരണങ്ങൾ മാതൃകയിൽ അനുസരിച്ച് പ്രത്യേകതയോടെ ലഭിക്കുന്നു. | 仅特定机型提供 | 약세사리는 모델마다 다를 수 있습니다. | Els accessoris poden canviar segons el model. | ვრცელდება მხოლოდ გარკვეულ მოდელებზე.




For indoor use only.










support.emea.aeg.com



www.aeg.com




Note: This instruction book should be read together with safety precaution booklet.








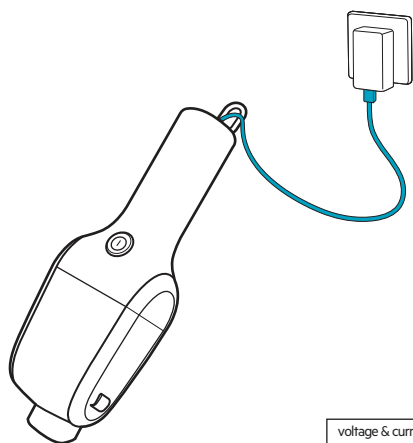


voltage & current: 5V, 2A
working temp / storage temp: 10-35°C / <60 °C

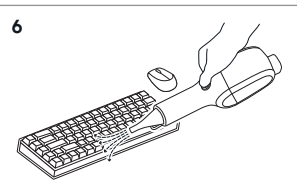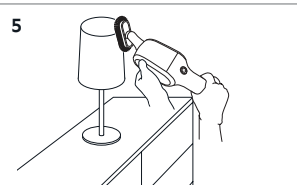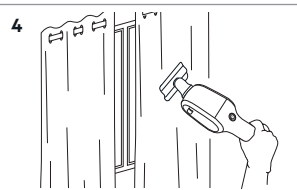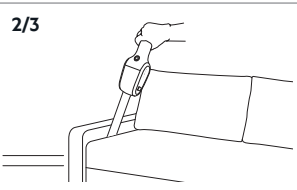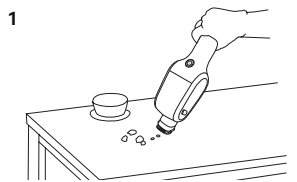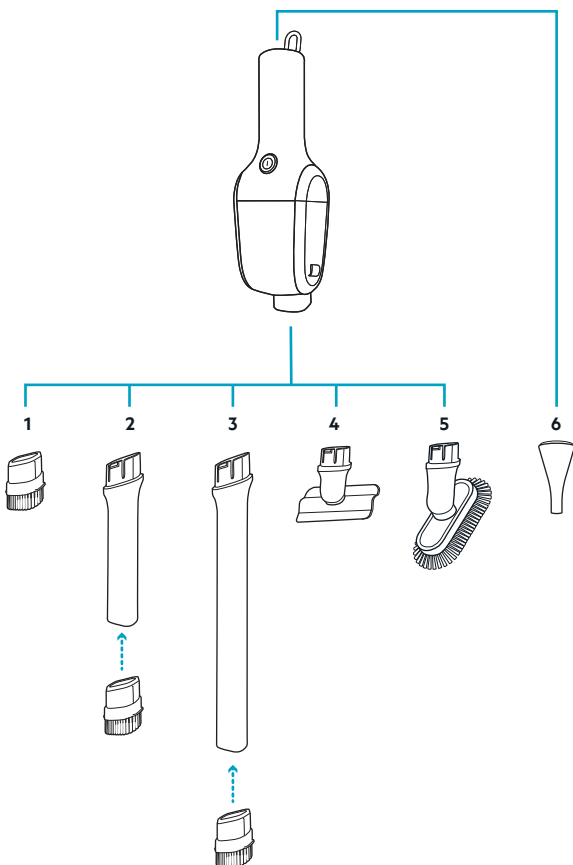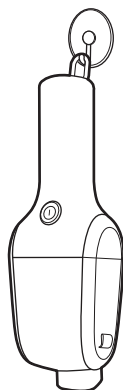

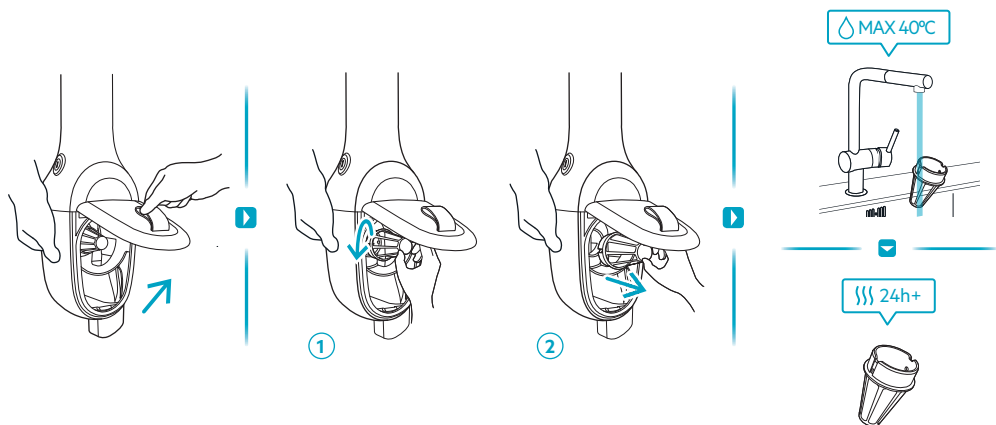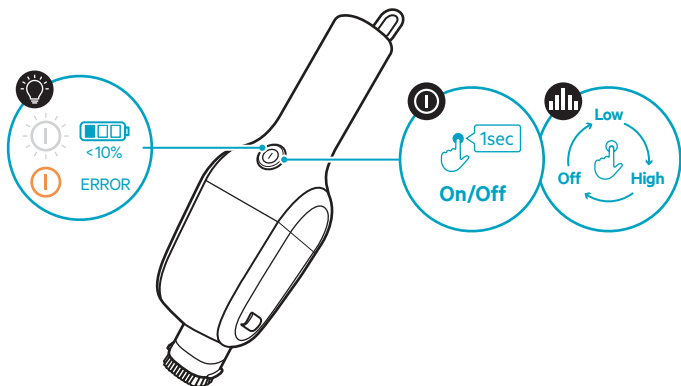

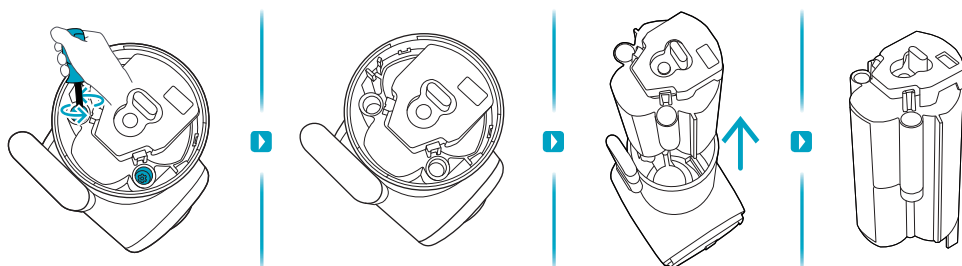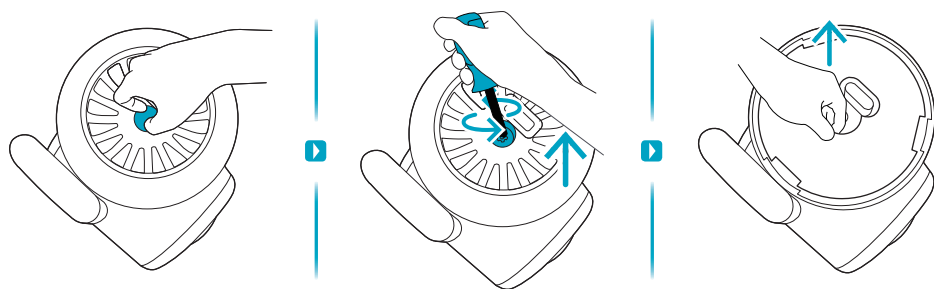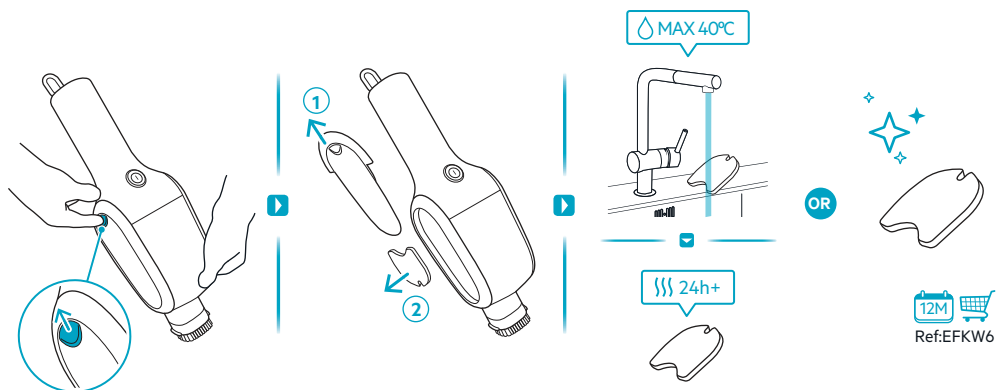

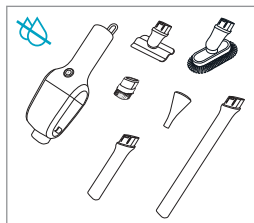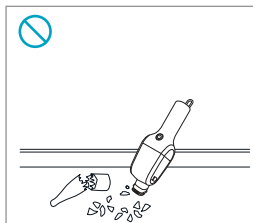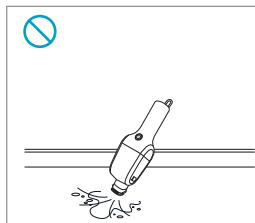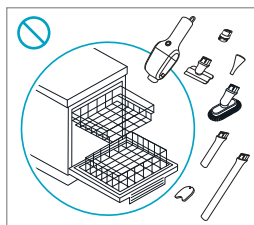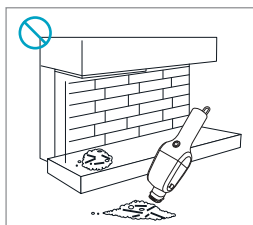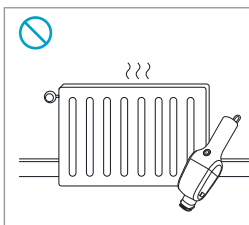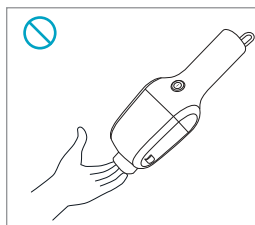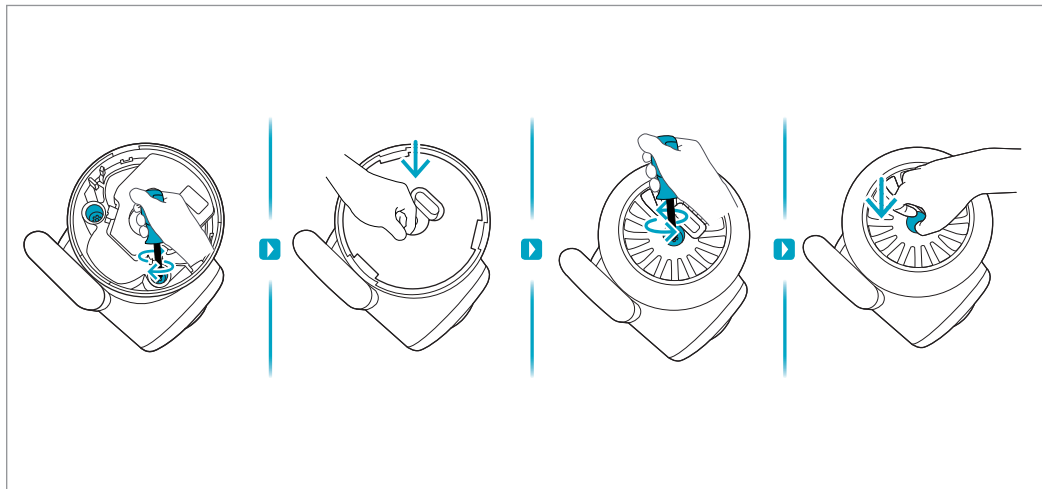


 www.aeg.com



EFKW6

900 923 915
Performance Kit

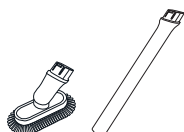

KIT27

900 923 916
Accessory Kit

*Accessories may vary by market.

Before entrusting the maintenance department, please check the following points:

Common issues	Possible Cause	Solution
Cannot turn on / Yellow button light on	Low battery.	Please charge the machine in time.
	Due to the filter not being cleaned, a blockage triggered the temperature protection.	Please clean the filter promptly after each use.
Weak suction	Clogged filter.	Please open the dust cup and clean the filter promptly.
	After charging, the suction is weak and the usage time is insufficient.	Continue charging until the flashing light goes off.
	The cyclone nose cone is not installed.	Open the dust cup lid to check if the nose cone is installed.
	The filter was not installed after cleaning.	Open the filter cover to check if the filter is installed.

ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances.

Do not dispose appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

For Switzerland:

Where should you take your old equipment?

Anywhere that sells new equipment or hand it in to official SENS collection points or official SENS recycling firms.

The list of official SENS collection points can be found at www.erecycling.ch

AEG