

DC311XX
DC313XX

DE Contents 05 Inhalt 06 Contenu 07 Inhoud 08 Sisältö
 IT Indhold 11 Contenido 12 Contenido 13 Contenido 14 Contenido
 GR Περιεχόμενα SE Innehåll



 
x1



x1



x1



x1



x2



x2


CR2032







x2



x1

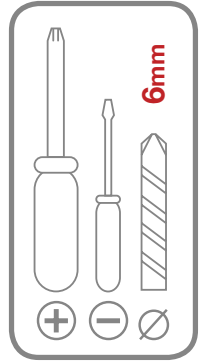


DE Getting started 05 Erste Schritte 06 Démarrage 07 Aan de slag 08 Aloitussopas 09 Kom i gang
 IT Operazioni preliminari 15 Para empezar 16 Para começar 17 Πρώτα βήματα 18 Kom igång

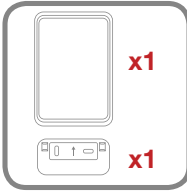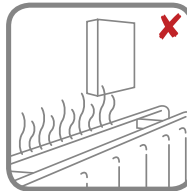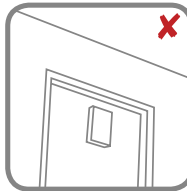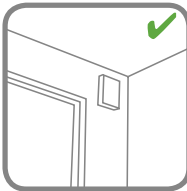


x1





x1

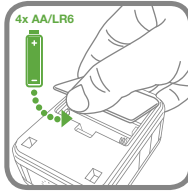


4x AA/LR6

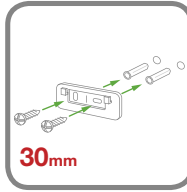



30mm

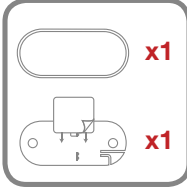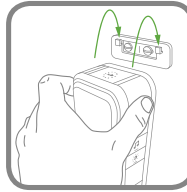



x1

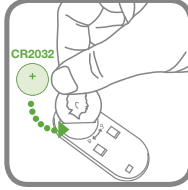



CR2032

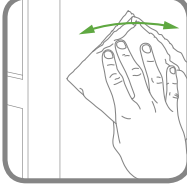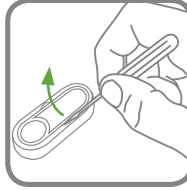


15mm

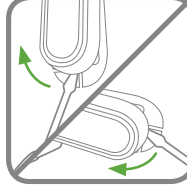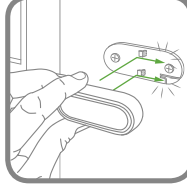




GB Optional features DE Optionale Funktionen
 FR Options disponibles IT Opzioni F Valinnaiset ominaisuudet
 OK Valgírnie funkcioner IT Funzionalità opzionali
 ES Opciones disponibles IT Funções opcionais
 PT Προαιρετικές λειτουργίες πρόσθετων SE Möjliga funktioner

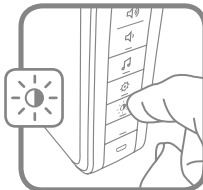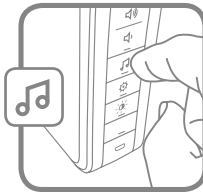

	Hello	Ding Dong	Westminster	Marimba	Piano	Bell	Telephone	Soft Alert
	•	•					•	•
	•	•	•	•			•	•
	•	•	•	•	•	•	•	•

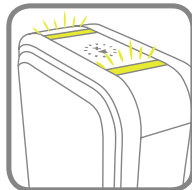

GB Linking DE Einlernen GB Programmation
 FI Verkkytymys IT Linkittäminen OK Forbinde
 PT Coligamento ES Enlace
 PT Programação GB Ουδέσση SE Länkning

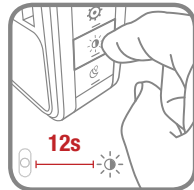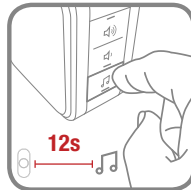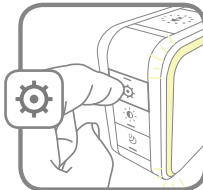

GB Trouble shooting DE Fehlerbehebung FR Dépannage IT Probleemoplossing
 FI Vianmääritys OK Problemløsning IT Risoluzione die problemi ES Solución de
 problemas PT Resolução de problemas GB Αντιμετώπιση προβλημάτων SE Felsökning

livewell.honeywell.com

