
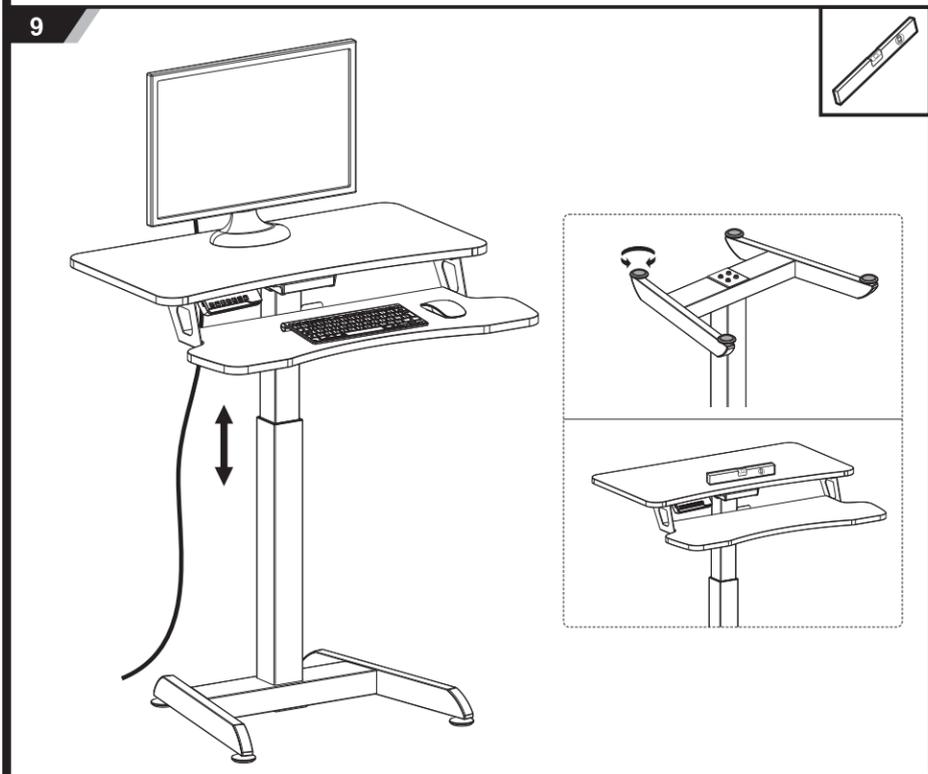
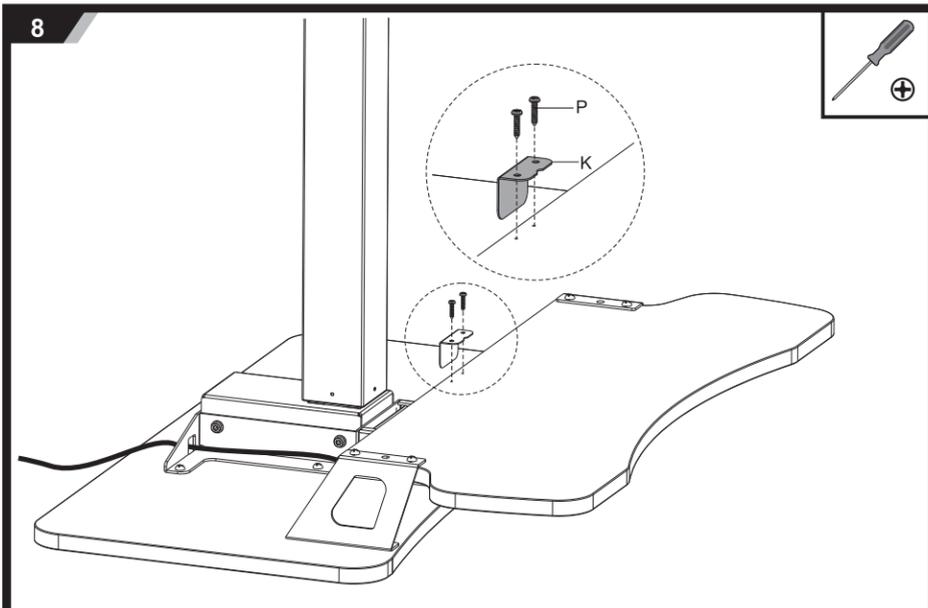
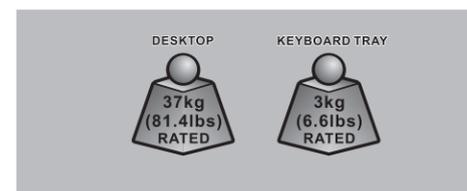


EN Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact your local distributor for assistance.

- CAUTION:** Use with products heavier than the rated weights indicated may result in instability causing possible injury.
- Please closely follow the assembly instructions. Improper installation may result in damage or serious personal injury.
 - Safety gear and proper tools must be used. This product should only be installed by professionals.
 - Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
 - Use the mounting screws provided and DO NOT OVER TIGHTEN mounting screws.
 - This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
 - This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.
- IMPORTANT:** Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, contact your place of purchase for a replacement.
- MAINTENANCE:** Check that the product is secure and safe to use at regular intervals (at least every three months).

Electric Sit-Stand Workstation

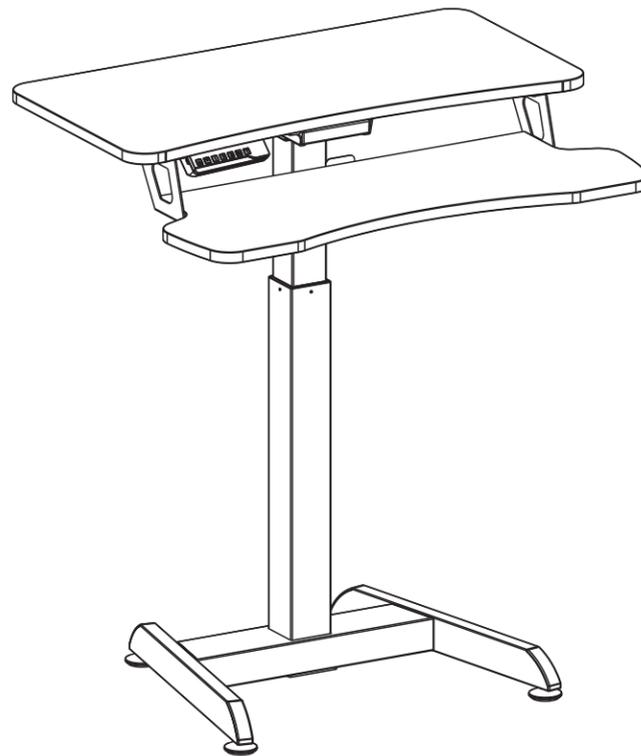

The product is powered by electricity. In order to avoid burns, fire and electric shock and make sure the safe and correct use of the system and maintain the longevity of the overall construction and the built-in electronics, please read the instructions carefully.

Warnings

- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge must not use the appliance, unless they are under supervision, understand the hazards involved or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons.
- Don't leave the cords or plug unorganized in order to prevent tripping hazards.
- Any attempts to reconstruct the construction aren't allowed.

Electrical Safety Instructions

- The appliance is only to be used with the power supply unit provided with the appliance. Alterations of the given power unit are not allowed.
- Never operate the system with a damaged power supply cord or plug. If any parts are damaged, please contact your supplier of purchase for a replacement.
- Never operate the system if it is in a humid environment or if the electrical components had contact with liquids.
- Do not clean the product while the power is still connected.
- Do not disassemble or replace components while the power is still connected.
- Unplug the workstation when the system is not in use. Place the power plug out of reach of children.

Control Panel Operation Instructions

- 1. Height Adjustment :** Press and hold the « ∇ » button to lift the desk. Press and hold the « Δ » button to lower the desk. (Tips: Clear up all obstacles within the height adjustment range.)
- 2. Timer :** The timer is designed to inform users to stand up after a set period of time. Press the «T» button to set the period of time. Each press of the «T» button leads to a 0.5 hour increment. The maximal setting of time period is 2 hours.
- 3. Memory Setting :** Adjust the desk to your desired position. Press the «M» button, the "S-" appears on the display. Press 1, 2 or 3. The memory is successfully set. You can store up to 3 heights by repeating the same process.
- 4. Power-Saving Mode :** When no actions are made for over 2 minutes, the system will enter power-saving mode. Press any buttons to enter operation mode.
- 5. Measurement Switch (cm/inch) :** Press «T» for 8 seconds. The buzzer beeps twice. The measurement can be changed from centimetre to inch. And press the «T» button for 8 seconds again. The buzzer beeps once. The measurement can be switched back to centimetre.
- 6. Reset Mode :** If the system is required to reset, reconnect the system. Then press the « ∇ » button until "RST" is displayed. Continue to press the « ∇ » button, the desk will move upwards a little bit and automatically come to a stop. The system is successfully reset.



Disposal :

The product with this mark indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the local recycle service or contact your point of purchase to withdraw the product.

