



*Life. Camera. Action!*

CX

GEBRUIKSAANWIJZING

[www.activeon.com](http://www.activeon.com)



## Inhoudsopgave

---

1. Naam van elk onderdeel .....	1
2. Gebruik en uitleg knoppen .....	2
3. Start de camera .....	3
4. LCD scherm afbeelding .....	4
5. Uitleg grafische iconen .....	5
6. Video opnemen .....	6
7. Foto maken .....	7
8. Hoofdmenu .....	7
8-1. Afspeel modus .....	8
8-2. Instellingen .....	9
9. Batterij opladen .....	12
10. Smartphone bediening .....	13
11. ACTIVEON CX verbinden met smartphone(via ACTIVEON App) .....	13
12. Data overzetten naar computer .....	15
13. Firmware updaten .....	16
14. Kenmerken en specificaties .....	17
15. In de verpakking .....	18
Waarschuwing .....	20
※ FCC RADIO FREQUENCY INTERFERENCE STATEMENT .....	20
※ RF Exposure Information (SAR) .....	21
Garantie .....	22

www.activeon.com

 
CE2200 FC  RoHS

# ACTIVEON

## CX

\* Lees deze gebruiksaanwijzing voor gebruik aandachtig door!

## 1. Naam van elk onderdeel

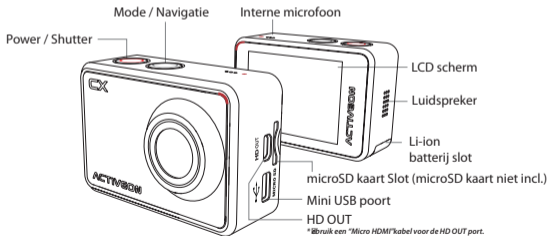





● LED lampje  
(Boven, onder, voor en achter)



Tripod opening (onder)

## 2. Gebruik en uitleg knoppen


- ACTIVEON CX wordt bediend met 2 knoppen. (  knop ,  button )
-  knop voor "Power, Shutter en Enter".
-  knop voor "Mode aanpassen, Navigatie en Hoofdmenu".

De functies van de knoppen staan hieronder uitgelegd.

Functie	Knop	
Power Aan / Uit		Druk op (  ) en houd deze 2 seconden ingedrukt. <i>* Wanneer Auto Power Off is ingeschakeld, wordt de camera automatisch na 3 minuten uitgeschakeld als hij niet gebruikt wordt.</i>
REC Start / Stop		Druk op (  ) om een video op te nemen of een foto te maken (Video / Foto / Burst / Timelapse)
Bevestig menu instelling		Druk op (  ) in het ingestellingen menu om naar een sub menu te gaan of een instelling te wijzigen

Functie	Knop	Omschrijving
Mode veranderen		Druk op (  ) knop om tussen modes te wisselen (Video > Foto > Foto burst > Foto timelapse)
Hoofdmenu		Druk op (  ) knop en hou deze 2 seconden ingedrukt om naar het hoofdmenu te gaan.
Navigatie		Druk op (  ) knop om te verplaatsen in het hoofdmenu of een instelling te wijzigen.

### 3. Start de camera




 





1. Open het batterij klepje en doe de ACTIVEON CX Li-ion batterij erin.
2. Doe een microSD kaart in de daarvoor bestemde opening. (De camera zal niet opnemen wanneer er geen microSD kaart in de camera zit.)
3. Druk op de (  ) knop en houd deze 2 seconden ingedrukt. ( De camera zal aangaan en op het LCD scherm verschijnt live beeld)







## 4. LCD scherm afbeelding




Nr.	Functie	Omschrijving
①	Huidige mode	Geeft huidige mode weer (video of foto)
②	Opname mode	Geeft huidige opname mode weer (Video - Auto stop / Looping / Timelapse) (Foto - Zelfontspanner / Timelapse / Burst)
③	Opname(tijd) informatie	Geeft opname tijd / aantal weer (Huidige opname (tijd) / Resterende opname (tijd) )
④	Batterij	Geeft batterij status weer
⑤	Resolutie	Video / Foto Resolutie
⑥	FOV	Geeft tijdens filmen / fotograferen de beeldhoek weer (Superbreed / Breed / Medium / Smal)
⑦	Zoom	Geeft huidig zoom niveau weer (Geen / x2 / x3 / x4)
⑧	Effect instelling	Geeft huidige effect instelling weer (Effect / Kwaliteit / Filter / AE meter / Ondersteboven)

## 5. Uitleg grafische iconen

Mode	Funcie	Icoon	Omschrijving
Live beeld	Huidige mode		Video mode
			Foto mode
	Batterij		Geeft batterij status weer
	FOV		Geeft FOV instelling weer (Superbreed /Breed / Medium /Smal)
	Zoom		Geeft huidig zoom niveau weer (Geen / x2 / x3 / x4)
	Effect		Geeft huidige effect instelling weer (Sport / Water / Nacht)
	Beeldkwaliteit		Geeft huidige beeldkwaliteit instelling weer (Superfijn / Fijn / Normaal)
	Filter		Geeft huidig filter weer. (Uit / Zwart&Wit / Warm / Negatief / Sepia / Rood / Groen / Blauw)
	AE Meter		Geeft huidige AE meter status weer (Punt / Centrum / Gemiddelde)

Mode	Functie	Icoon	Omschrijving
Video	Auto stop		Neemt op gedurende vooraf ingestelde tijd. (1min / 5min / 10min / 30min)
	Timelapse		Neemt beeld op, op vooraf ingesteld interval en maakt een timelapse videobestand. (1sec / 3sec / 5sec / 10sec / 30sec / 60sec)
	Looping		Neemt continu een video op van een vooraf ingestelde tijd, totdat deze stop wordt gezet. (5min / 20min / 60min / 120min)
Foto	Zelfontspanner		Neemt een foto na een vooraf ingestelde tijd. (5sec / 10sec / 15sec)
	Burst		Neemt meerdere foto's achter elkaar (3 per sec , 5 per sec)
	Timelapse		Neemt foto's op een vooraf ingesteld interval (1sec / 3sec / 5sec / 10sec / 30sec / 60sec)

## 6. Video opnemen

1. Nadat de camera is aangezet, druk op de () knop om een video op te nemen.
2. Wanneer de camera aan het opnemen is, gaat het LED lampje knipperen\* en is de opnametijd in zichtbaar.
3. Druk op de () knop om de opname te stoppen.
4. De video instellingen kunnen worden aangepast in het hoofdmenu.

*\* Wanneer de LED Off optie is ingeschakeld, gaat het LED lampje niet knipperen.*



## 7. Foto nemen

---

Druk op de (⊙) knop om te wijzigen naar foto mode.

De mode verandert als volgt:

 
**Video mode** — **Foto mode** — **Foto burst** — **Foto timelapse** in turn.

1. Druk op de (⊙) knop om een foto te nemen.
2. In 'Foto Timelapse' mode, Druk op de (⊙) knop om de opnamen te stoppen.
3. De foto instellingen kunnen worden aangepast in het hoofdmenu.

## 8. Hoofdmenu

---

- Video's en foto's kunnen worden teruggekeken en instellingen kunnen worden aangepast in het hoofdmenu.

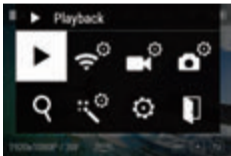

1. Druk op de (⊙) knop en houd deze 2 sec in om in het hoofdmenu te komen.
2. Het hoofdmenu is onderverdeeld in 7 opties.  
(Playback, WiFi, Video, Foto, Zoom, Effect and algemene instellingen)
3. Druk op de (⊙) knop om naar de volgende optie te gaan.
4. Druk op de (⊙) knop in de submenu's.

## 8-1. Afspeel modus

- De gebruiker kan de opgenomen video's en foto's op het scherm bekijken.  
Druk op de (○) knop om te navigeren door de opties boven aan het scherm.
- Terwijl het bestand wordt afgespeeld, kunnen de opties boven aan het scherm worden geactiveerd door op de (○) knop te drukken.

Functie	Operatie
	<p><b>Thumbnail overzicht</b></p> <p>Druk op de (○) knop om een bestand te kiezen. Druk op de (○) knop om het bestand te selecteren.</p> <p> (Video / Foto / Looping / Timelapse / Burst)</p>
	<p><b>Video afspelen</b></p> <p>Druk op de (○) knop om te navigeren tussen de opties boven aan het scherm. Druk op de (○) knop om een functie te selecteren.</p>

Functie	Operatie
	<p><b>Foto's bekijken</b></p> <p>Druk op de (○) knop om te navigeren tussen de opties boven aan het scherm.</p> <p>Druk op de (○) knop om een functie te selecteren.</p>

## 8-2. Instellingen

Functie	Submenu	Omschrijving
WiFi	WiFi APP	Schakel de WiFi in om verbinding te maken met een smartphone
	OFF	Schakel de WiFi uit om de verbinding met een smartphone te verbreken
	BACK	Ga terug naar vorig menu
Video Instellingen	Opname mode	Handmatig / Auto Stop / Looping / Timelapse Video
	Auto Stop	1min / 5min / 10min / 30min
	Video Timelapse	1sec / 3sec / 5sec / 10sec / 30sec / 60sec
	Looping	5min / 20min / 60min / 120min
	Resolutie	NTSC : 1080p 30fps / 960p 30fps / 720p 60fps / 720p 30fps / 480p 60fps PAL : 1080p 25fps / 960p 25fps / 720p 50fps / 720p 25fps / 480p 50fps
	BACK	Ga terug naar vorig menu

Funcie	Submenu	Omschrijving
Foto instellingen	Shooting mode	Handmatig / Zelfontspanner / Burst / Timelapse
	Zelfontspanner	5sec / 10sec / 15sec
	Burst	3 foto's per 1 sec / 5 foto's per 1 sec
	Timelapse	1sec / 3sec / 5sec / 10sec / 30sec / 60sec
	Megapixel	5MP / 4MP / 3MP
	BACK	Terug naar vorig menu
Zoom	x1	Inzoomen (x1/x2/x3/x4)
	x2	
	x3	
	x4	
Effect instellingen	FOV	Superbreed / Breed / Medium / Smal
	Kwaliteit	Superfijn / Fijn / Normaal
	Ondersteboven	Aan / Uit
	AE Meter	Centrum / Gemiddelde / Punt
	EV	-2.0 / -1.0 / 0 / 1.0 / 2.0

\* De chipset van deze action camera ondersteunt 4MP en kan worden opgeschaald naar 5MP door middel van optische systeem instellingen

Funcie	Submenu	Omschrijving
Effect instellingen	Filter	Uit / Zwart&Wit / Warm / Negatief / Sepia / Rood / Groen / Blauw
	Tijdsstempel	Aan / Uit
	Effect	Uit / Water / Sport / Nacht
	Witbalans	Auto / 3000K / 5500K / 6500K
	ISO	100 / 200 / 400 / 1600 / Auto
	BACK	Terug naar vorig menu
Algemene instellingen	Mic Volume	Uit / 30% / 70% / 100%
	Luidspreker	Uit / 30% / 70% / 100%
	Piep	Aan / Uit
	LED Indicatoren	Aan / Twee / Vier
	TV Out	NTSC / PAL
	Geheugen formateren	Ja / Nee
	Tijd instelling	MM>DD>JJ>UU>MM>AM/PM>GEREED
	Auto LCD uit	Nooit / 1min / 2min / 3min
	Helderheid	25% / 50% / 75% / 100%

Functie	Submenu	Omschrijving
Algemene Instellingen	Auto Power off	Nooit / 1 min / 2min / 3min
	Standaard	Ja / Nee
	Versie Info	Geeft huidige firmware versie weer
	WiFi Info	Geeft huidig WiFi SSID en Paswoord weer
	BACK	Ga terug naar vorig menu

## 9. Batterij opladen

Het LCD geeft het batterij bijna leeg (  ) icoon wanneer de batterij bijna leeg is en de camera uit gaat.

De camera slaat automatisch het bestand op wanneer voordat deze uitschakelt. De batterij moet worden opgeladen voordat de camera weer aangezet kan worden.

Opladen duurt ongeveer 3,5 uur via een USB poort.

De batterij oplader (optionele accessoire) kan worden gebruikt voor snel laden.

1. Zet de camera uit
2. Sluit de camera aan op een USB poort via de USB kabel.
3. Het LED lampje zal aangaan ter indicatie dat de batterij aan het opladen is.
- 12 4. Het LED lampje zal uitgaan wanneer de batterij volledig is opgeladen.

## 10. Smartphone bediening

---

Door het gebruik van de WiFi APP functie van ACTIVEON, kan je de camera bedienen met een smartphone.

Te gebruiken met iOS en Android OS

Voordat verbinding wordt gemaakt met de camera, download eerst de 'ACTIVEON' applicatie in de app store.

Zoek op 'ACTIVEON' in Apple App Store of Google Play Store.

- \* Terwijl de camera verbonden is met een smartphone, kunnen de knoppen op de camera niet gebruikt worden.*
- \* Een foto of video kan worden gemaakt en de camera instellingen kunnen worden aangepast.*
- \* 'ACTIVEON' functies worden geupgrade via de applicatie op de smartphone.*

## 11. ACTIVEON CX verbinden met smartphone(via ACTIVEON App)

---

 
### Op de camera

Schakel de 'WiFi APP' functie in op de ACTIVEON CX.

Op het scherm van de camera verschijnt "Waiting for connection"

*\* Wanneer je 'WiFi APP' wilt uitschakelen, druk 2 sec op (  ) en kies OFF.*

*At that time, you can turn off the "WiFi APP" and exit from the black screen.*



## 11. ACTIVEON CX verbinden met smartphone(via ACTIVEON App)

### Op de Smartphone

Schakel de WiFi in op de smartphone of tablet en selecteer het netwerk CX0-xxxxxx in de WiFi instellingen.

Het standaard paswoord is '1234567890'.

Start de 'ACTIVEON'

Druk op 'Connect ACTIVEON' in de app. Nu kan de ACTIVEON camera bediend worden.





## 12. Data overzetten naar de computer (werkt met zowel Windows OS als Mac OS)

---

Wanneer de camera uitstaat, maar verbonden is met een computer of oplader, dan zal de camera de batterij gaan laden.

Wanneer de camera aanstaat, maar verbinden is met een computer, dan zal de camera overgaan naar bestandsoverdracht mode.

Wanneer de camera is verbonden met een oplader of autolader, dan kan deze tegelijkertijd ook opnemen.

1. Zet de ACTIVEON CX aan.
2. Sluit de camera aan op een computer via de USB kabel.
3. Het LCD display van de camera laat nu zien: 'USB Ready'.
4. Ga naar 'mijn computer'.
5. Zoek naar 'verwisselbare schijf'.
6. Dubbelklik op de 'verwisselbare schijf'.
7. Dubbelklik op de 'DCIM' map.
8. Open mappen om de video's en foto's te zien
9. Kopieer en plak de bestanden naar de computer.

### 13. Firmware update (Vind de laatste firmware op [www.activeon.com](http://www.activeon.com))

---

De laatste firmware updates van ACTIVEON zijn altijd te vinden op de website ([www.activeon.com](http://www.activeon.com)).

Firmware upgrade kan mogelijk niet beschikbaar zijn als de batterij niet genoeg is opgeladen.

Zorg dat de batterij ten minste 2 streepjes toont op het LCD display voordat de camera wordt geupdate.

1. Formateer de geheugenkaart en kopieer het bestaand naar de hoofdmap van de microSD kaart.
2. Plaats de microSD kaart in de ACTIVEON CX en zet deze aan.
3. De firmware update zal nu automatisch starten en de status verschijnt op het LCD scherm.
4. De camera zal automatisch uitschakelen wanneer de update voltooid is.

**\* Schakel de camera niet zelf uit en haal de batterij niet uit de camera tijdens de firmware upgrade.**

A black rectangular area representing the LCD screen of the camera. It contains the text 'F/W Updating..' in white.

Do not power off !!

## 14. Kenmerken en specificaties

---

- "ACTIVEON CX" 1080p 30fps Action camera
- Full HD(1920 x 1080) resolutie, 30fps opname
- 196ft(60m) waterdichte housing
- 5M pixel high precision digital image CMOS sensor
- 170° wide-angle field of view (FOV) (*\* Video recording 160 ° FO*)
- Ingebouwd 2 inch (320x240) LCD scherm
- Ingebouwde WiFi antenne
- Verschillende opname resoluties (1080p/960p/720p/480p)
- Burst foto opname (tot 5 opnames in 1 seconde)
- H.264 codec, opgeslagen als MOV formaat
- Oplaadbare Li-ion battery
- Battery: ongeveer 120 minuten met continue opname (1080p 30fps)  
*\* Opname tijd kan fluctueren, afhankelijk van de omgevings condities*
- Opladen: 3,5 uur via USB poort / 2,5 uur via adaptor (optionele accessoire)
- Eenvoudige grafische interface op LCD scherm
- Complete line-up met accessoires

## 15. In de verpakking

---



ACTIVEON CX  
Action camera



Waterdichte  
Behuizing



Gebogen klevende  
bevestiging



 
Verbindingsschroef



Kort verbindingsstuk



Oplaadbare Li-on Batterij



USB kabel

CX

NOTICE

[www.activeon.com](http://www.activeon.com)



## CAUTION

It could be exploded if the battery is inappropriate type. Please insert proper type of battery according to instructions.



The symbol means that according to local laws and regulations your product should be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. Some collection points accept products for free. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

## FCC RADIO FREQUENCY INTERFERENCE STATEMENT

FCC ID : XOMCCX01

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.  
The device can be used in portable exposure condition without restriction.00

## RF Exposure Information (SAR)

NOTE : This appliance and its antenna must not be co-located of operation in conjunction with any other antenna or transmitter. A minimum separation distance of 20cm must be maintained between the antenna and the person for this appliance to satisfy the RF exposure requirements.

This device meets the U.S. government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard employs a unit of measurement known as the Specific Absorption Rate(SAR). The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC, with the device transmitting at the certified power level in all tested different channels.

The FCC have granted an Equipment authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC, and can be found under the Display Grant section of [www.fcc.gov/oet/ea/fddid](http://www.fcc.gov/oet/ea/fddid) after searching on **FCC ID : XOMCCX01**

This device is compliance with SAR for general population / uncontrolled exposure limits in ANS/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET bulletin 65 Supplement C.

CX

**USA** Warranty

[www.activeon.com](http://www.activeon.com)





## ACTIVEON LIMITED WARRANTY

This limited warranty is provided by ACTIVEON to the original end-user purchaser ("Purchaser"), when delivered in new condition in its original container.

The Product is warranted to be free from manufacturing defects under normal use and service for a period of 12 months from the date of original purchase ("Warranty Period"). Where there is no evidence of the date of original purchase, ACTIVEON shall consider the date of manufacture as the date of original purchase.

If the Product is returned to an ACTIVEON and ACTIVEON concludes in its discretion that the product is defective in manufacture, ACTIVEON may, at its sole discretion and without charge (a) exchange the Product for a new Product, or (b) exchange the Product for a refurbished Product.

Exchange or replacement of the Product does not extend the original warranty period of the Product.

No warranty shall be provided if the Product is damaged through the negligence or fault of others, abuse, mishandling, improper packaging by you, alteration, accident, electrical current fluctuations, failure to follow ACTIVEON's operating and maintenance instructions, or if services are performed to the Product by someone other than ACTIVEON or its authorized service provider. Water, environmental, sand, and corrosion damage; battery leakage, scratches, or damage to the Product will be presumed to have resulted from misuse, abuse or failure to operate the Product as set forth in the operating and maintenance instructions. No warranty shall be provided if the Product has had its serial number or dating altered or removed.

ACTIVEON SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE DURING OR AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE, AND NO OTHER EXPERT WARRANTY OR GUARANTY, EXCEPT AS MENTIONED ABOVE, SHALL BE BINDING ON ACTIVEON. (SOME STATES AND PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU) ACTIVEON SHALL NOT BE LIABLE FOR AND SPECIFICALLY DISCLAIMS LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, ANY ACCIDENT, INJURY, DEATH, LOSS OR OTHER CLAIM RELATED TO OR RESULTING FROM THE USE OF THIS PRODUCT, INCLUDING BUT NOT LIMITED TO LOSS OF REVENUES OR PROFITS, INCONVENIENCE, EXPENSE FOR SUBSTITUTE EQUIPMENT OR SERVICE, STORAGE CHARGES, LOSS OR CORRUPTION OF DATA, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE OR MISUSE OF, OR INABILITY TO USE, THE PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED. ACTIVEON SHALL NOT BE LIABLE FOR WATER HOUSING LEAKAGE OR ANY RESULTING DAMAGES CAUSED BY USER'S RESEALING ERROR. IN NO EVENT SHALL RECOVERY OF ANY KIND AGAINST ACTIVEON BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT. WITHOUT LIMITING THE FOREGOING, THE PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE OR MISUSE OF, OR INABILITY TO USE, THE PRODUCT NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF ACTIVEON. (SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU). THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THE PRODUCT, AND IS THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY.

For assistance (USA) – If you purchased ACTIVEON product in USA and have questions regarding the product or this Limited Warranty, please call 1-858-798-3300. Or visit [www.activeon.com](http://www.activeon.com).

It is the Purchaser's responsibility to properly package and send the Product, together with a copy of the original proof of purchase, an explanation of the problem, and a return address to ACTIVEON at the Purchaser's expense. If the Product covered by this limited warranty and proven to be defective upon inspection, it will be serviced and returned to the Purchaser at no charge. Any received Product that is not covered by this limited warranty or is beyond the Warranty Period will be returned as it is.

CX

EU Warranty

[www.activeon.com](http://www.activeon.com)



## ACTIVEON LIMITED WARRANTY (EU)

The following limited warranty is provided by ACTIVEON with respect to the ACTIVEON product ("Product") purchased by the original end user purchaser ("Purchaser"), when delivered in new condition in its original container. Consumers have legal rights under applicable national legislation governing the sale of consumer goods. Such rights are not affected by the warranties in this limited warranty.

The Product is warranted to be free from manufacturing defects under normal use and service for a period of 24 months as from the date of original purchase ("Warranty Period"). Where there is no evidence of the date of original purchase, ACTIVEON shall consider the date of manufacture as the date of original purchase.

If the Product is returned to ACTIVEON and ACTIVEON concludes in its discretion that the product is defective in manufacture, ACTIVEON may, at its sole discretion and without charge (a) exchange the Product for a new Product, or (b) exchange the Product for a refurbished Product.

Exchange or replacement of the Product does not extend the original Warranty Period of the Product.

No warranty shall be provided if the Product is damaged through the negligence or fault of others, abuse, mishandling, improper packaging by you, alteration, accident, electrical current fluctuations, failure to follow ACTIVEON's operating and maintenance instructions, or if services are performed to the Product by someone other than ACTIVEON or its authorized service provider. Water, environmental, sand, and corrosion damage; battery leakage, scratches, or damage to the Product will be presumed to have resulted from misuse, abuse or failure to operate the Product as set forth in the operating and maintenance instructions. No warranty shall be provided if the Product has had its serial number or dating altered or removed. Damages deriving from an accident or caused by the natural wear and tear (including but not limited to accessories and batteries) do not fall within this guarantee or other guarantees.

ACTIVEON SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE DURING OR AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE, AND NO OTHER EXPERT WARRANTY OR GUARANTEE, EXCEPT AS MENTIONED ABOVE, SHALL BE BINDING ON ACTIVEON. (SOME TERRITORIES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU) ACTIVEON SHALL NOT BE LIABLE FOR AND SPECIFICALLY DISCLAIMS LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, ANY ACCIDENT, INJURY, DEATH, LOSS OR OTHER CLAIM RELATED TO OR RESULTING FROM THE USE OF THIS PRODUCT, INCLUDING BUT NOT LIMITED TO LOSS OF REVENUES OR PROFITS, INCONVENIENCE, EXPENSE FOR SUBSTITUTE EQUIPMENT OR SERVICE, STORAGE CHARGES, LOSS OR CORRUPTION OF DATA, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE OR MISUSE OF, OR INABILITY TO USE, THE PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED. ACTIVEON SHALL NOT BE LIABLE FOR WATER HOUSING LEAKAGE OR ANY RESULTING DAMAGES CAUSED BY USER'S RESEALING ERROR. IN NO EVENT SHALL RECOVERY OF ANY KIND AGAINST ACTIVEON BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT. WITHOUT LIMITING THE FOREGOING, THE PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE OR MISUSE OF, OR INABILITY TO USE, THE PRODUCT NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF ACTIVEON (SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU). EXCEPT WHERE PROHIBITED BY APPLICABLE LAW, (I) THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THE PRODUCT, AND IS THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY AND (II) THIS LIMITED WARRANTY IS LIMITED TO THE COUNTRY OF PURCHASE OF THE PRODUCT.

For assistance (EU) – If you purchased an ACTIVEON product in the EU and if you have questions regarding the Product or this Limited Warranty, please visit [www.activeon.com](http://www.activeon.com).

It is the Purchaser's responsibility to properly package and send the Product, together with a copy of the original proof of purchase, an explanation of the problem, and a return address to ACTIVEON. If the Product is covered by this Limited Warranty and proven to be defective upon inspection, it will be serviced and returned to the Purchaser at no charge. Any received Product that is not covered by this Limited Warranty will be returned to the Purchaser as it is.

ACTIVEON EU B.V. HULLENBERGWEG 278 1101 BV AMSTERDAM THE NETHERLANDS (Not a visiting address)

ACTIVEON