

## - Get started with Chromecast Audio

Introducing Chromecast Audio

What's in the box?

Plug in Chromecast Audio

Set up Chromecast Audio

How to cast audio: A quick start guide

Ethernet Adapter for Chromecast Audio:  
Quick Start Guide

 
Chromecast Audio compatible speakers and  
cables

Chromecast Audio safety, regulatory and  
warranty information



# Plug in Chromecast Audio

You can connect Chromecast Audio to your speakers in a few simple steps:

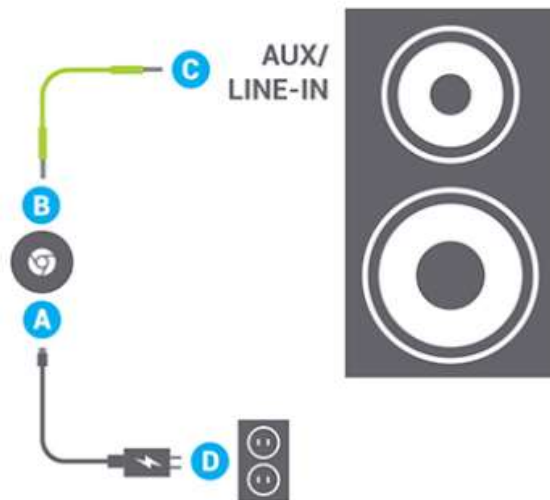


- **A:** Plug the USB power cable into your Chromecast Audio. Then plug the other end into the provided power supply.
- **B:** Plug the audio cable into your Chromecast Audio.
- **C:** Plug the other end of the audio cable into any open standard 3.5 mm port. **Note:** You can also use speaker systems with RCA inputs and optical digital inputs, but required cables are sold separately. Here's how to [plug these in](#). [↗](#)
- **D:** Plug the provided power supply into an open outlet.

It's important to use the cables and adapters that come inside the Chromecast Audio box.

Once your Chromecast Audio is plugged in, turn on your speaker and choose the input source that your Chromecast Audio is connected to. Once you hear the music, adjust the speaker volume to a comfortable level.

# What's in the box?

 Inside the box, you'll find the Chromecast Audio, a stereo 3.5 mm analog audio cable, a USB power cable, and a power supply. It's important to only use the cables that come in the Chromecast Audio box; other cables may not work.

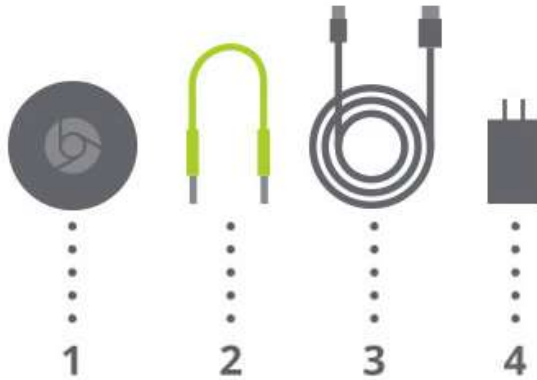

1. **Chromecast Audio:** Plugs into any speaker system that has an aux-in or line-in port using the included audio cable (#2). Chromecast Audio uses your existing Wi-Fi network to stream audio from the internet for playback on your existing speaker system. Chromecast Audio is controlled from devices on the same Wi-Fi network, such as mobile devices, tablets, or computers, and is powered using the USB cable and provided power supply (#3, #4).
2. **Audio cable:** Connects Chromecast Audio to speaker systems that support aux-in and line-in connections via a standard 3.5 mm port. Optionally, speaker systems with RCA inputs and optical digital inputs are supported, but [required cables are sold separately](#).
3. **USB power cable:** Provides power to your Chromecast Audio. One end plugs into your Chromecast Audio and the other end plugs into the power supply (#4).
4. **Power supply:** Used with the USB power cable (#3) to power your Chromecast Audio (#1)

For a video demonstration, check out this [YouTube video](#).

# How to cast audio: A quick start guide

Can't wait to get casting? I know, there's so much music to enjoy. Get started with these simple steps:

## Step 1. Plug Chromecast Audio into your speaker using the audio cable.

Then connect the USB power cable to your Chromecast Audio and plug the other end into a power outlet using the included power supply. **Note:** Only use the provided AC adapter.

## Step 2. Connect

Double check that the Chromecast Audio and the mobile device, tablet, or laptop you are using to set up Chromecast Audio with are both on the *same Wi-Fi network*.

## Step 3. Download the Google Home app

On your mobile device, tablet, or laptop, [download the Google Home app](#) 

## Step 4. Set up Chromecast Audio

Follow these simple Chromecast Audio [setup instructions](#) .

## Step 5. Enjoy your music!

 
Cast music, radio channels, and podcasts from your mobile device, tablet or laptop to your speakers.

*Mac OS and OS X are registered trademarks of Apple Inc. Windows is a registered trademark of Microsoft Inc. iOS is a trademark or registered trademark of Cisco Inc. The Netflix logo is a trademark of Netflix, Inc. Netflix is available in certain countries. Unlimited streaming membership required. More information at [www.netflix.com](http://www.netflix.com).*

## CHROMECAST AUDIO

MODEL RUX-J42

### WHAT YOU'LL FIND IN YOUR CHROMECAST AUDIO BOX:

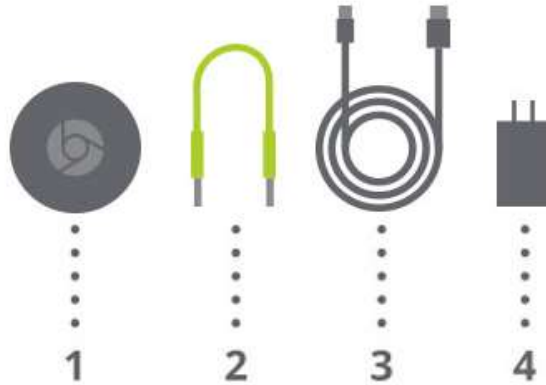

- 1. Chromecast Audio:** Plugs into any speaker system that has an aux-in or line-in port using the included audio cable(#2). Chromecast Audio uses your existing Wi-Fi network to stream audio from the internet for playback on your existing speaker system. Chromecast Audio is controlled from devices on the same Wi-Fi network, such as mobile devices, tablets, or computers, and is powered using the USB cable and provided power supply (#3, #4).
- 2. Audio cable:** Connects Chromecast Audio to speaker systems that support aux-in and line-in connections via a standard 3.5 mm port. Optionally, speaker systems with RCA inputs and optical digital inputs are supported, but [required cables](#) are sold separately.
- 3. USB power cable:** Provides power to your Chromecast Audio. One end plugs into your Chromecast Audio, and the other end plugs into the power supply (#4).
- 4. Power supply:** Used with the USB power cable (#3) to power your Chromecast Audio (#1)

## **WARNINGS TO USERS**

- Chromecast Audio may get hot to the touch; this is normal. Unplug Chromecast Audio's power source and let it cool before removing it from your speaker system.
- You should only use the cables and plugs provided with your device to plug it in.
- If you must use a different power supply than the one provided with your device, use a UL Listed power supply marked "LPS" or "Class 2", with output rated 5Vdc, 1A.
- Do not expose Chromecast Audio or the power supply to water or extreme conditions (moisture, heat, cold, dust), as Chromecast Audio or the power supply may malfunction or cease to work when exposed to such elements.
- Do not attempt to disassemble or repair Chromecast Audio yourself. Doing so voids the limited warranty and could harm you, your speaker system, and/or Chromecast Audio.
- Chromecast Audio is an entertainment device; it is not designed, manufactured or intended for use in hazardous environments requiring fail-safe performance in which the failure of Chromecast Audio could lead directly to death, personal injury, or severe physical or environmental damage.
- Take care when handling the power supply to avoid electric shock.
- Caution: Risk of electric shock. Dry location use only.

### **Pacemaker Notice**

The device contains radios that emit electromagnetic fields. These electromagnetic fields may interfere with pacemakers or other medical devices. If you wear a pacemaker, maintain at least 20 cm (8 inches) of separation between your pacemaker and your device. If you suspect your device is interfering with your pacemaker or any other medical device, stop using it and consult your physician for information specific to your medical device.

Do not carry the device in the front pocket of your shirt or coat.

For information about other active medical implants, please contact the producer or a doctor to ensure that your product's magnetic field will not interfere with the implant.

### **Device with Magnet**

Avoid placing any media that contains magnets or is sensitive to magnetism, such as credit cards, bank cards, audio/video, tapes, or magnetic memory devices, near this product.

Media containing information sensitive to magnets should be kept at least 5 cm away from the product. For example, if you carry your wallet or billfold containing magnetic cards next to this product, information stored on those cards could be destroyed.

Similarly, magnet sensitive devices, such as a mechanical watch or measuring device, can be damaged if they come too close to this product.