

DC311XX
DC313XX

05 Contents 05 Inhalt 05 Contenu 05 Inhoud 05 Sisältö
 06 Inhold 06 Contenido 06 Contênto 06 Conteúdo
 06 Περιεχόμενα 06 Innehåll




x1



x1



x1

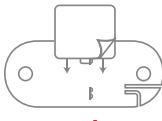

x1



x2



x2


CR2032




x2



x1

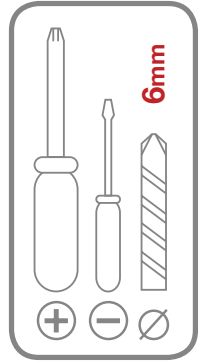


06 Getting started 06 Erste Schritte 06 Démarrage 06 Aan de slag 06 Aloitussopas 06 Kom i gang
 07 Operazioni preliminari 07 Para empezar 07 Para começar 07 Πρώτα βήματα 07 Kom igång

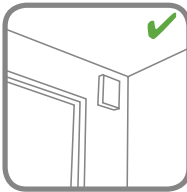


✓




✓

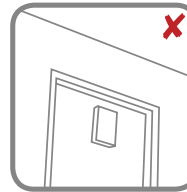

✗

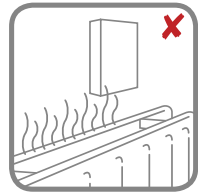


✗

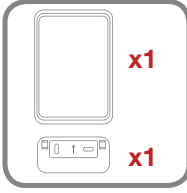


x1




x1

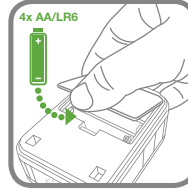

4x AA/LR6

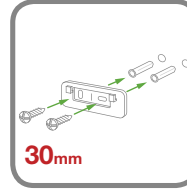


30mm

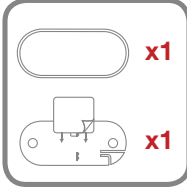



x1






x1

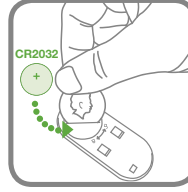


CR2032

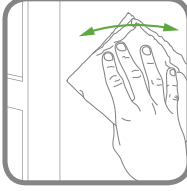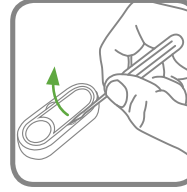


15mm

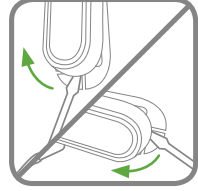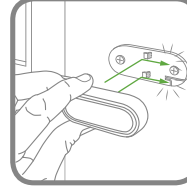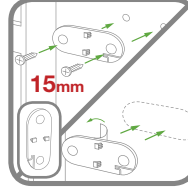




DE Optional features **DE** Optionale Funktionen
FR Options disponibles **FR** Opções **FR** Valinnaiset ominaisuudet
OK Valgírnie funktjónir **IT** Funzionalità opzionali
ES Opciones disponibles **PT** Funcções opcionais
GR Προαιρετικές λειτουργίες πρόσθετων **SE** Möjliga funktioner

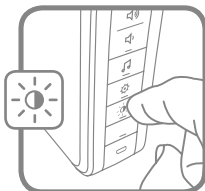

	Hello	Ding Dong	Westminster	Marimba	Piano	Bell	Telephone	Soft Alert
	•	•					•	•
	•	•	•	•			•	•
	•	•	•	•	•	•	•	•

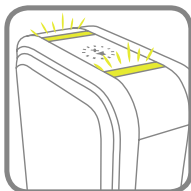

SE Linking **DE** Einlernen **FR** Programmation
UK Verknüpfung **FI** Linkittäminen **OK** Forbinde
IT Collegamento **ES** Enlace
PT Programação **GR** Ουδέωση **SE** Länkning

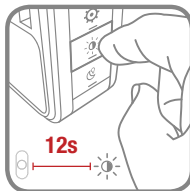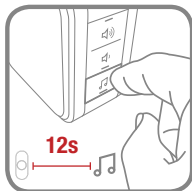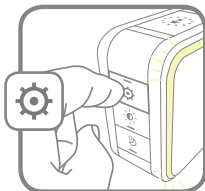

GB Trouble shooting **DE** Fehlerbehebung **FR** Dépannage **UK** Probleemoplossing
FI Vianmääritys **OK** Problemløsning **IT** Risoluzione die problemi **ES** Solución de
 problemas **PT** Resolução de problemas **GR** Αντιμετώπιση προβλημάτων **SE** Felsökning

livewell.honeywell.com

