CINEMA SB580MK2



OWNER’S MANUAL

IMPORTANT SAFETY INSTRUCTIONS

Verify Line Voltage Before Use

The JBL CINEMA BAR SB580MK2 (soundbar and subwoofer) has been designed for use with 100-240 volt, 50/60 Hz AC current. Connection to a line voltage other than that for which your product is intended can create a safety and fire hazard and may damage the unit. If you have any questions about the voltage requirements for your specific model or about the line voltage in your area, contact your retailer or customer service representative before plugging the unit into a wall outlet.

Do Not Use Extension Cords

To avoid safety hazards, use only the power cord supplied with your unit. We do not recommend that extension cords be used with this product. As with all electrical devices, do not run power cords under rugs or carpets, or place heavy objects on them. Damaged power cords should be replaced immediately by an authorized service center with a cord that meets factory specifications.

Handle the AC Power Cord Gently

When disconnecting the power cord from an AC outlet, always pull the plug; never pull the cord. If you do not intend to use this product for any considerable length of time, disconnect the plug from the AC outlet.

Do Not Open the Cabinet

There are no user-serviceable components inside this product. Opening the cabinet may present a shock hazard, and any modification to the product will void your warranty. If water accidentally falls inside the unit, disconnect it from the AC power source immediately, and consult an authorized service center.

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS 2

1. INTRODUCTION 4

2. WHAT'S IN THE BOX 5

3. PRODUCT OVERVIEW 6
   - 3.1 Soundbar 6
   - 3.2 Subwoofer 7
   - 3.3 Remote control 7

4. PLACEMENT 8
   - 4.1 Unfold the soundbar 8
   - 4.2 Desktop placement 9
   - 4.3 Wall-mounting 9

5. CONNECT 10
   - 5.1 Connection with your TV and digital devices 10
   - 5.2 Bluetooth connection 11

6. PLAY 12
   - 6.1 Power-on/Auto standby/Auto wakeup 12
   - 6.2 Play from the TV source 12
   - 6.3 Play from the HDMI IN source 13
   - 6.4 Play from the Bluetooth source 13

7. SURROUNDPLAY 14

8. SOUND SETTINGS 15
   - 8.1 Dolby Atmos 15
   - 8.2 Bass / Treble adjustment 15
   - 8.3 Audio sync 15

9. RESTORE FACTORY SETTINGS 16

10. RE-CONNECT THE SUBWOOFER 16

11. PRODUCT SPECIFICATIONS 17

12. TROUBLESHOOTING 18

13. TRADEMARKS 19

1. INTRODUCTION


Thank you for purchasing the JBL CINEMA BAR SB580MK2 (soundbar and subwoofer) which is designed to bring an extraordinary sound experience to your home entertainment system. We encourage you to take a few minutes to read through this manual, which describes the product and includes step-by-step instructions for setting up and getting started.

Designs and specifications are subject to change without notice. If you have any questions about the soundbar, installation or operation, please contact your retailer or customer service representative, or visit our website: www.jbl.com.


2. WHAT'S IN THE BOX

Unpack the box carefully and ensure that the following parts are included. If any part is damaged or missing, do not use it and contact your retailer or customer service representative.


Soundbar




Subwoofer

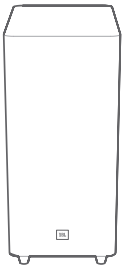

Remote control (with 2 AAA batteries)

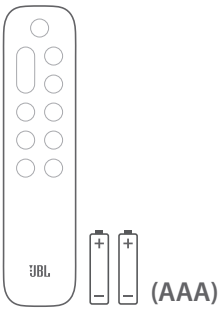


Power cord*

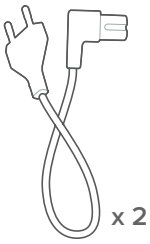


* Power cord quantity and plug type vary by regions.


HDMI cable



Wall-mounting kit




Product information & wall-mounting template

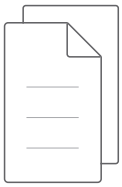

3. PRODUCT OVERVIEW

3.1 Soundbar

3.1.1 Front panel & Top panel

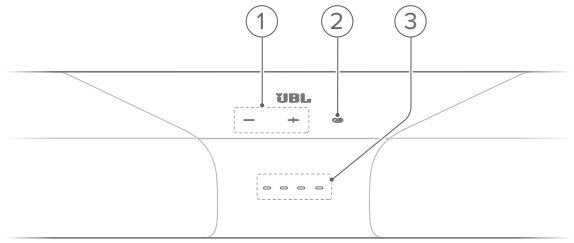


1. **–/+ (Volume)**
   - Wake up the soundbar.
   - Press to decrease or increase the volume.
   - Hold to decrease or increase the volume continuously.
   - Press both buttons together to mute or unmute.
2. **(Source)**
   - Wake up the soundbar.
   - Select a sound source: **TV** (default, for audio input from TV connection where the **HDMI / HDMI OUT** connector is prioritized over the **OPTICAL / OPTICAL** connector), **HDMI IN** or Bluetooth.
   - In Bluetooth mode, hold for more than 3 seconds to enter Bluetooth pairing mode.
3. **Status indicators**


●	Solid (red)	Standby mode
●	Fast flashing (red)	System startup
○	Solid (white)	**HDMI ARC / eARC** source selected
●	Solid (yellow)	**HDMI IN** source selected
●	Solid (amber)	**Optical** source selected
●	Fast flashing (blue)	Bluetooth pairing mode
●	Slow flashing (blue)	Bluetooth reconnecting
●	Solid (blue)	Connected to a Bluetooth device
●	Solid (green)	Playing Dolby Atmos® audio
●	Fast flashing (red)	Subwoofer pairing mode
●	Slow flashing (red)	Subwoofer disconnected from the soundbar
●	Fast flashing (purple)	Grouping with two supported speakers
●	Solid (purple)	Grouped with two supported speakers
\	Flashing (current sound source color)	Volume adjustment
\	Slow flashing (current sound source color)	Maximum / minimum volume reached
\	Continuous slow flashing (current sound source color)	Sound muted
All LEDs turn off after 20 seconds of inactivity, except the red LED in standby mode.		

3.1.2 Back panel

Americas version (excluding Brazil)

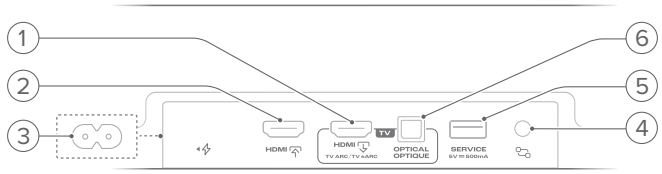


All other versions

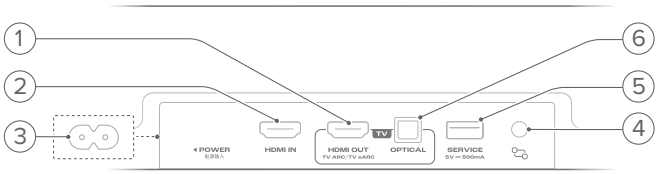

1. **HDMI / HDMI OUT**
   - Connect to the HDMI ARC/HDMI eARC input on your TV.
2. **HDMI / HDMI IN**
   - Connect to the HDMI output on your digital device.
3. **Power inlet**
   - Connect to power.
4.
   - Press to start SurroundPlay grouping with two supported speakers (sold separately).
5. **SERVICE**
   - Service use only.
6. **OPTICAL / OPTICAL**
   - Connect to the optical output on your TV.

3.2 Subwoofer

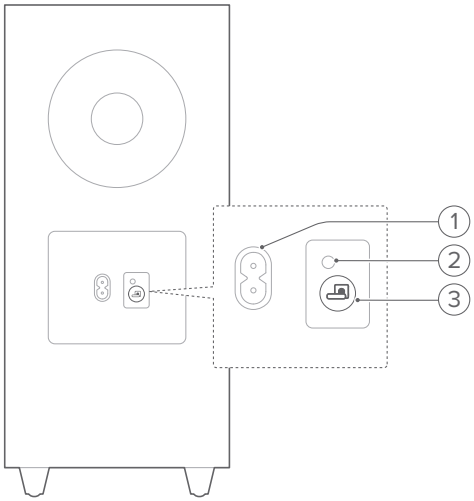


1. **Power inlet**
   - Connect to power.
2. **Connection status indicator**

●	Solid amber	Connected to the soundbar
☀	Fast flashing (amber)	Pairing mode
☀	Regular flashing (amber)	Reconnecting to the soundbar
●	Off	Standby mode or disconnected from the soundbar

3.
   - Press to reconnect the subwoofer to the soundbar.
   - Hold for more than 5 seconds to enter pairing mode.

3.3 Remote control

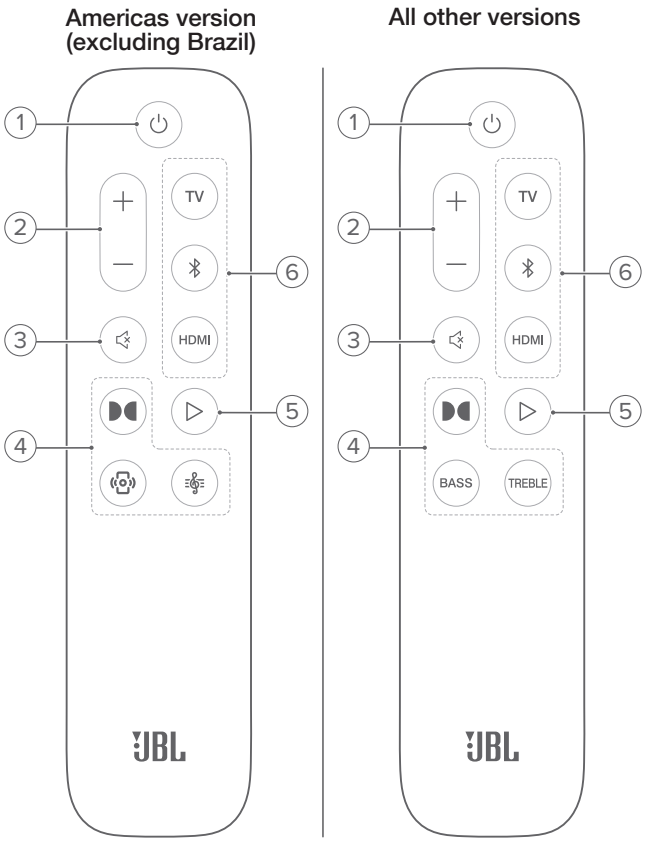

1.
   - Switch on or to standby.
2. **+ / –**
   - Press to increase or decrease the volume.
   - Hold to increase or decrease the volume continuously.
3. **(Mute)**
   - Mute or unmute.
4. **Sound effect buttons**

   DOLBY
   - Switch the virtual Dolby Atmos sound effects on or off (Default: on).

   / BASS
   - Select the bass level: 1/2/3 (default)/4/5.

   / TREBLE
   - Select the treble level: 1/2/3 (default)/4/5.
5. **(Playback button for Bluetooth source)**
   - Single press: Pause or resume playback
   - Double press: Next track
   - Triple press: Previous track

6. **Source selectors**

TV

- Select the **TV** source (automatically switches to **eARC/ ARC** or **Optical** source when the HDMI / optical cable is connected; HDMI **/ HDMI OUT** connector is prioritized over the OPTICAL OPTIQUE **/ OPTICAL** connector).

(Bluetooth)

- Press to select the Bluetooth source.
- Hold for more than 3 seconds to enter Bluetooth pairing mode.


HDMI

- Select the **HDMI IN** source.

4. PLACEMENT

4.1 Unfold the soundbar


Before using the soundbar, unfold it to its full position.

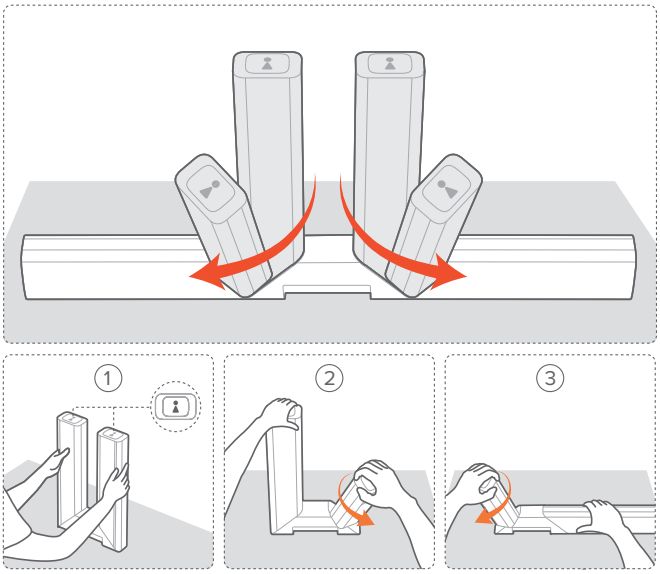

1. Place the soundbar on a flat surface. Adjust its position and angle as shown in Figure 1.
2. Rotate the right side outward counterclockwise until it is fully extended and locked in place.
3. Rotate the left side outward clockwise until it is fully extended and locked in place.

4.2 Desktop placement


Place the soundbar and subwoofer on a flat and stable surface. Make sure that the subwoofer is at least 1 m / 3 ft away from the soundbar, and 10 cm / 4" away from a wall.

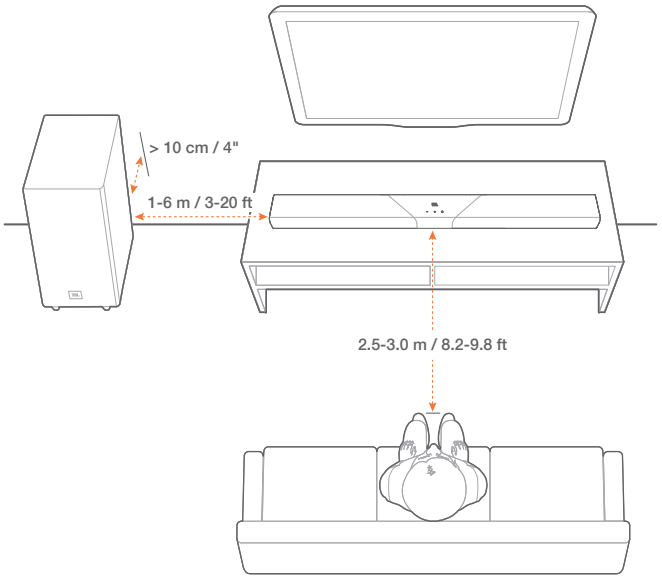

NOTES:

- The power cord shall be properly connected to power.
- Do not place any objects on the top of the soundbar or subwoofer.
- Make sure that the distance between the subwoofer and the soundbar is less than 6 m / 20 ft.

4.3 Wall-mounting

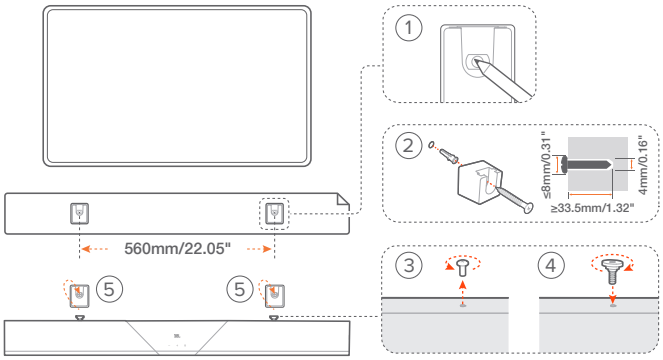

1. Preparation:
   a) Stick the supplied wall-mounting template to a wall by using adhesive tape.
   b) Use your ballpen tip to mark the screw holder location. Remove the template.
   c) At the marked location, drill a 4 mm / 0.16" hole. Refer to Figure 2 for the screw size.
2. Install the wall-mounting bracket.
3. As shown in the diagram, remove the fastening screw by using a screwdriver.
4. Fasten the wall-mounting screw included in the supplied mounting kit.
5. Mount the soundbar.

NOTES:

- Make sure that the wall can support the weight of the soundbar.
- Install on a vertical wall only.
- Avoid locations with high temperature or humidity.
- Before wall-mounting, make sure that cables can be properly connected between the soundbar and external devices.
- Before wall-mounting, make sure that the soundbar is unplugged from power. Otherwise, it may cause an electric shock.

5. CONNECT

5.1 Connection with your TV and digital devices

For audio playback through the soundbar, connect the soundbar with your TV through the supplied HDMI cable or an optical cable (sold separately).


An HDMI connection supports digital audio and video with a single connection. HDMI connectivity is the best option for your soundbar.

NOTES:

- When both HDMI and optical cables are connected to the soundbar for audio input from TV connection, the HDMI connection is prioritized.
- Full compatibility with all HDMI-CEC devices is not guaranteed.
- * The HDMI cable (for digital device connection) and the optical cable are sold separately.

5.1.1 TV (HDMI eARC)

(Recommended connection for the best Dolby Atmos experience)

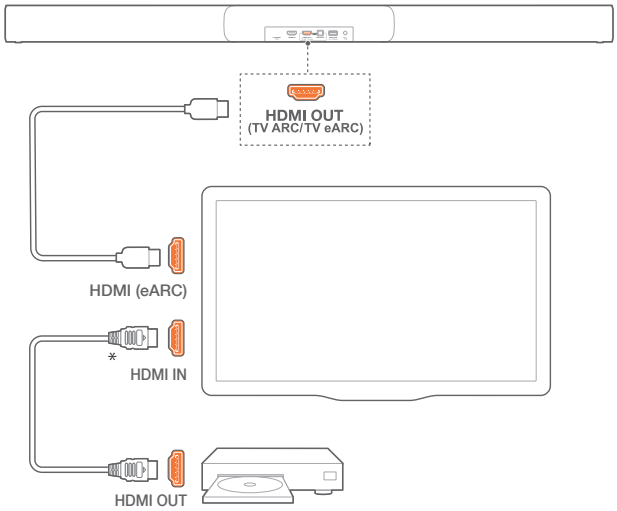


1. Connect the soundbar with the **HDMI IN (eARC)** connector on your TV by using the supplied HDMI cable.
   - On your TV, check that HDMI-CEC and HDMI eARC have been enabled. Refer to the owner's manual of your TV for more information.
2. Use an HDMI cable (V2.0 or later) to connect your TV with your digital device, such as a streaming device, set-top box, DVD / Blu-ray player or game console.
   - On your digital device, check that HDMI-CEC has been enabled. Refer to the owner's manual of your digital device for more information.
   - On your TV and digital device, select "Bitstream" or "Raw data" in the audio output settings for the best Dolby Atmos experience.

NOTES:

- To play audio from the digital device connected to your TV, select the **TV** source (See "6.2 Play from the TV source").
- With the Virtual Dolby Atmos design, the Dolby surround upmixer of the soundbar can expand the legacy channel-based audio of Dolby Digital format, including 5.1 and 7.1 content, and provide an immersive 3D Atmos experience.

5.1.2 TV (HDMI ARC)

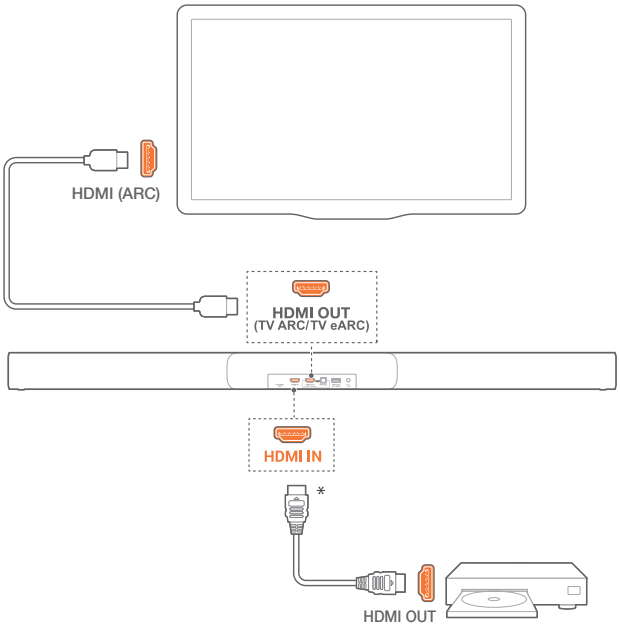


1. Connect the soundbar with the **HDMI IN (ARC)** connector on your TV by using the supplied HDMI cable.
   - On your TV, check that HDMI-CEC and HDMI ARC have been enabled. Refer to the owner's manual of your TV for more information.
2. Use an HDMI cable (V2.0 or later) to connect the soundbar with your digital device, such as a set-top box, DVD / Blu-ray player or game console.
   - On your digital device, check that HDMI-CEC has been enabled. Refer to the owner's manual of your digital device for more information.
   - On your digital device, select "Bitstream" or "Raw data" in the audio output settings for the best Dolby Atmos experience.

NOTES:

- To play audio from the digital device connected to the soundbar, select the **HDMI IN** source (See "6.3 Play from the HDMI IN source").
- If your TV does not support HDMI eARC, make sure that you connect your digital device through the **HDMI / HDMI IN** connector on the soundbar instead of your TV. Otherwise, the Dolby Atmos information cannot pass through the HDMI (ARC) connectors to the soundbar.

5.1.3 OPTICAL

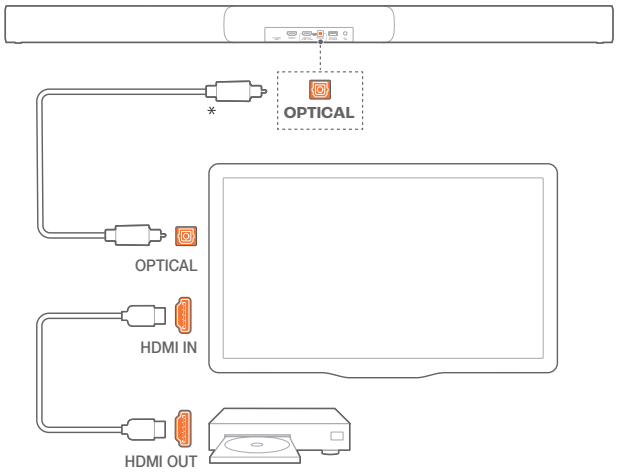


1. Connect the soundbar with your TV by using an optical cable.
2. Use an HDMI cable (V2.0 or later) to connect your TV with your digital device, such as a streaming device, set-top box, DVD/Blu-ray player or game console.

NOTE:

– To play audio through the optical cable, select the **TV** source (See "6.2 Play from the TV source").

5.2 Bluetooth connection

Through Bluetooth, connect the soundbar with your Bluetooth device, such as a smartphone, tablet, or laptop.

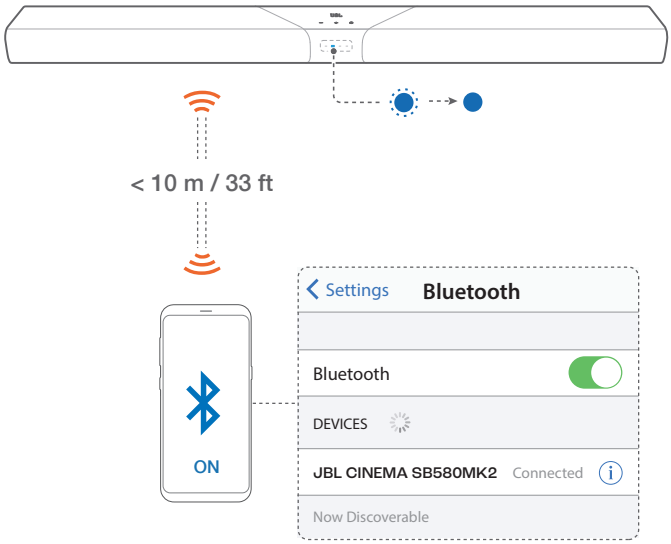

5.2.1 Connect a Bluetooth device

1. Make sure that the soundbar and subwoofer are switched on (See "6.1 Power-on/Auto standby/Auto wakeup").
2. To select the Bluetooth source, press ⏻ repeatedly on the soundbar or ᛒ on the remote control.


   → **Ready for pairing:** The status indicator flashes blue quickly (●).
3. On your Bluetooth device, enable Bluetooth and search for "**JBL CINEMA SB580MK2**" within three minutes.

   → **Connected:** The status indicator turns solid blue (●). A confirmation tone is heard.

5.2.2 Reconnect the last paired device

Your Bluetooth device is retained as a paired device when the soundbar goes to standby mode. Next time you switch to the Bluetooth source, the soundbar reconnects the last paired device automatically.

5.2.3 Connect to another Bluetooth device

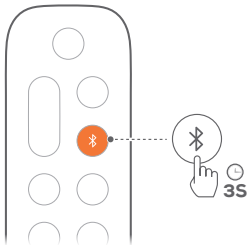

1. In the Bluetooth mode, hold ⏻ on the soundbar or ᛒ on the remote control until the status indicator flashes blue.

   → The soundbar enters the Bluetooth pairing mode.
2. Follow step 3 under "5.2.1 Connect a Bluetooth device".
   - If the device has ever been paired with the soundbar, first unpair "**JBL CINEMA SB580MK2**" on the device.


NOTES:

– The Bluetooth connection will be lost if the distance between the soundbar and Bluetooth device exceeds 10 m / 33 ft.

– Electronic devices may cause radio interference. Devices that generate electromagnetic waves must be kept away from the soundbar, such as microwaves and wireless LAN devices.

6. PLAY

6.1 Power-on/Auto standby/Auto wakeup

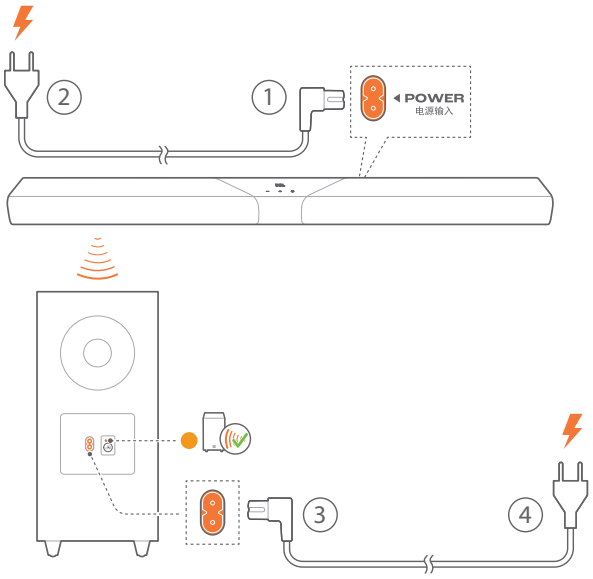

Switch on

1. Connect the soundbar and subwoofer to power using the supplied power cords.
2. To switch on, press any button on the top panel of the soundbar, or press ⏻ on the remote control.
   → The subwoofer is connected to the soundbar automatically.
   → **Connected:** The connection status indicator turns solid amber (●).

NOTES:

– Use the supplied power cord only.
– Before switching on the soundbar, make sure that you have completed all other connections (See "5.1 Connection with your TV and digital devices").

Auto standby

The soundbar automatically switches to standby mode after 10 minutes of inactivity. The subwoofer also goes to standby, and the connection status indicator turns off (●).

→ Next time you switch on the soundbar, it returns to the last selected source.


Auto wakeup

In standby mode, the soundbar will wake up automatically when

- the soundbar is connected to your TV through the HDMI ARC/eARC connection and your TV is switched on;
- the soundbar is connected to your TV through an optical cable and audio signals are detected from the optical cable.

6.2 Play from the TV source

With the soundbar connected, you can enjoy TV audio from the soundbar speakers.

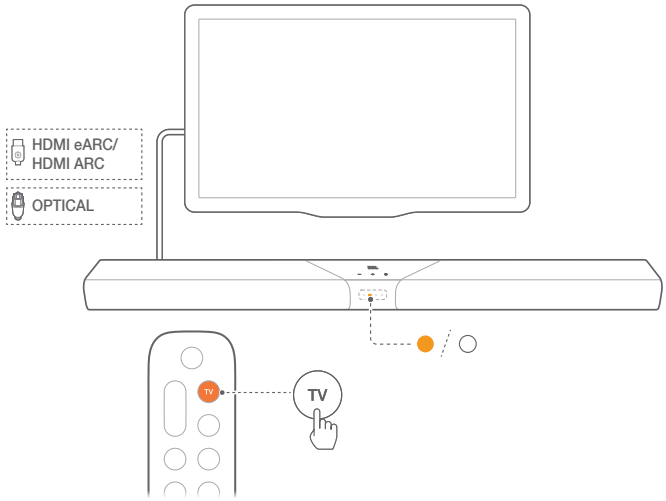

1. Make sure that your TV is set to support external speakers and the built-in TV speakers are disabled. Refer to the owner's manual of your TV for more information.
2. Make sure that the soundbar has been properly connected to your TV (See "5.1 Connection with your TV and digital devices").
3. To select the **TV** source, press ⮌ repeatedly on the soundbar or **TV** on the remote control.
   → When playing through an HDMI ARC/eARC cable, the status indicator turns solid white (○).
   → When playing through an optical cable, the status indicator turns solid amber (●).

6.2.1 TV remote control setup

To use your TV remote control for both your TV and the soundbar, check that your TV supports HDMI-CEC. If your TV does not support HDMI-CEC, follow the steps under "6.2.2 TV remote control learning".

HDMI-CEC

If your TV supports HDMI-CEC, enable the functions as instructed in your TV's user manual. You can control the "volume +/-, sound source, and power on/standby" functions on your soundbar through the TV remote control.

6.2.2 TV remote control learning

Through IR learning, you can program the soundbar to accept IR commands from your TV remote control, and then use your TV remote control for simple commands.

1. On the soundbar, hold ⮌ and **+** buttons together for more than 5 seconds until the status indicator flashes amber.
   → The soundbar enters the TV remote control learning mode. The status indicator flashes red 3 times.


2. Point your TV remote control at the soundbar. Follow the instructions below:
   a) On your TV remote control, press the power button twice.
   b) On the soundbar, hold one of these buttons: +, –, or ⏻ until the status indicator flashes red 4 times. Then, on your TV remote control, press the desired button twice.
   c) Repeat step b) to complete the button learning.
3. To exit the TV remote control learning mode, hold ⏻ and + buttons again for more than 5 seconds.

NOTE:

– The soundbar will automatically exit the TV remote control learning mode after 30 seconds of inactivity. The learned functions are discarded.

6.3 Play from the HDMI IN source

With the soundbar connected as shown, your digital device can play video on your TV and audio from the soundbar.

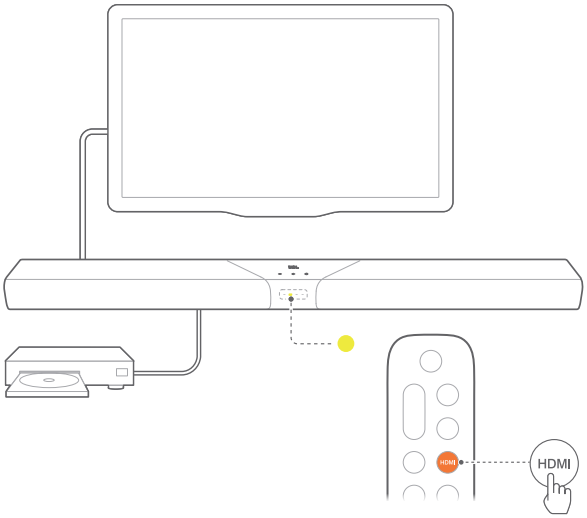

1. Make sure that the soundbar has been properly connected to your TV and digital device (See "5.1 Connection with your TV and digital devices").
2. Switch on your digital device.
   → Your TV and the soundbar wake up from standby mode and switch to the input source automatically.
   - To select the **HDMI IN** source on the soundbar, press ⏻ on the soundbar repeatedly or **HDMI** on the remote control.


   → The status indicator turns solid yellow (●), if you play from the **HDMI IN** source.

NOTE:

– Full compatibility with all HDMI-CEC devices is not guaranteed.

6.4 Play from the Bluetooth source

Through Bluetooth, stream audio from your Bluetooth device to the soundbar.

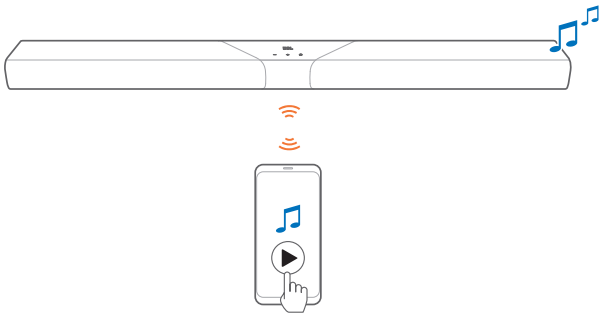

1. Check that the soundbar has been properly connected to your Bluetooth device (See "5.2 Bluetooth connection").
2. To select the Bluetooth source, press ⏻ repeatedly on the soundbar or ᛒ on the remote control.
3. Start audio playback on your Bluetooth device.
4. Adjust the volume on the soundbar, remote control or your Bluetooth device.


7. SURROUNDPLAY

With SurroundPlay, you can group the soundbar with two supported JBL speakers (such as JBL Flip 7) to enable rear surround sound.


NOTES:

- SurroundPlay is not supported when the soundbar is connected via Bluetooth.
- Make sure that the soundbar, subwoofer, and speakers are all turned on.

1. Place the two identical speakers at the left and right rear of your seating area.

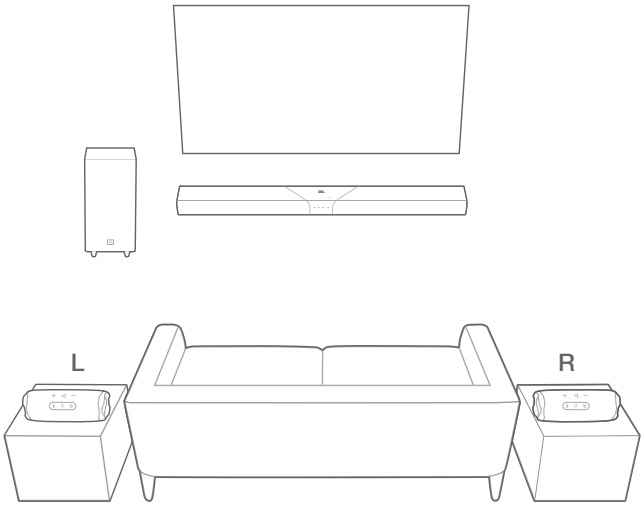


2. To start grouping, press on the soundbar. Alternatively, on the remote control, hold for more than 3 seconds, then press **TV**.

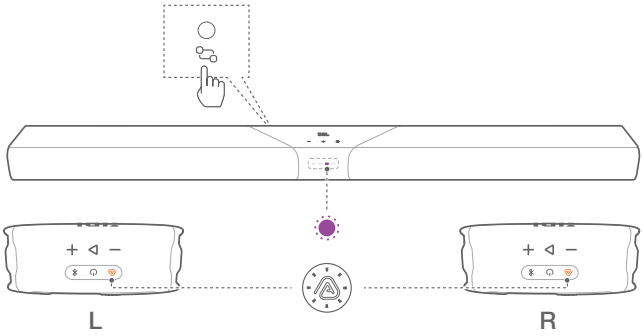


→ On the soundbar, the status indicator flashes purple quickly ( ).

→ On the speakers, the LEDs on the buttons flash white ( ).

3. Press on the left rear speaker first, then press on the right rear speaker.

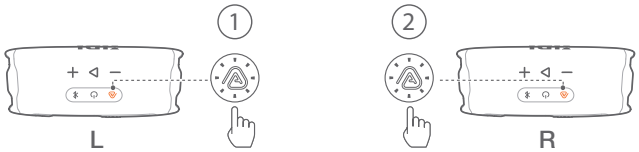

4. When grouping is complete, surround sound will play through the two rear speakers.

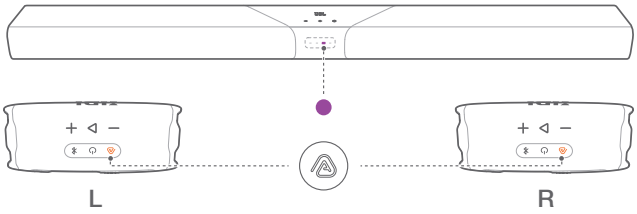

→ The speakers are now grouped with the soundbar as rear surround channels.

→ When grouped, the status indicator on the soundbar turns solid purple ( ), and the LEDs on the buttons of the speakers turn off ( ).


NOTES:

- To view all supported models, visit www.jbl.com.
- The group will be canceled when the soundbar or speaker powers off or enters standby, or when the or button on any one of the speakers is pressed.
- When grouping fails, is canceled, or is triggered in Bluetooth mode, the status indicator on the soundbar slowly flashes red 3 times ( ).

8. SOUND SETTINGS

8.1 Dolby Atmos

With virtual Dolby Atmos, enjoy height sound effects when you play movies from the **TV / HDMI IN** source.

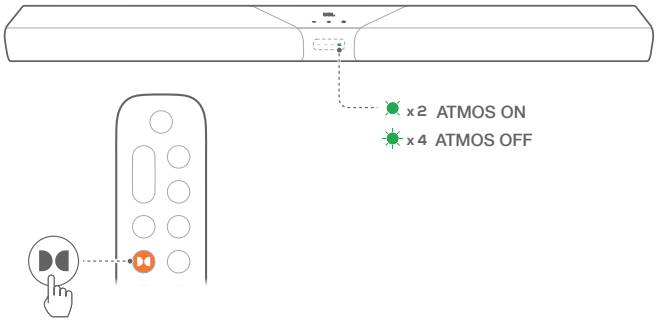


1. Connect and play your Blu-ray player or streaming device as described under "5.1 Connection with your TV and digital devices".
   → The status indicator turns solid green (●), if the Dolby Atmos audio content is playing on the soundbar.
2. Press ◗◖ on the remote control to switch the height sound effects on or off (Default: on).
   → The status indicator flashes green slowly twice (●), if the Dolby Atmos sound effect is enabled on the soundbar.
   → The status indicator flashes green quickly 4 times (✳), if the Dolby Atmos sound effect is disabled on the soundbar.

NOTES:

– If you prefer not to have any height sound effects during your viewing or listening, switch off the Dolby Atmos sound effects.
– The Dolby Atmos sound effects apply only to Dolby Atmos audio content.

8.2 Bass / Treble adjustment


You can make bass / treble adjustment as needed.

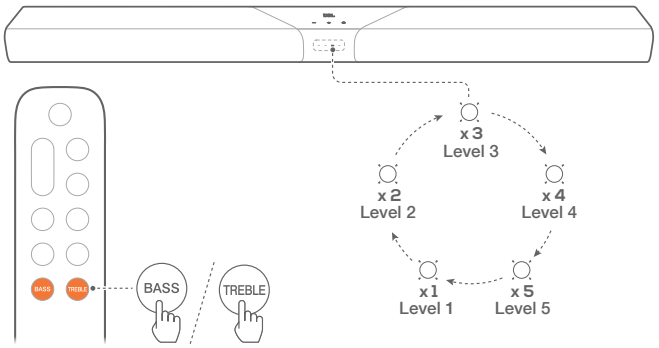

- On the remote control, press **/ BASS** or **/ TREBLE** to toggle between bass / treble levels: Level 1, 2, 3, 4, 5 (Default: Level 3).

8.3 Audio sync

With the audio sync function, you can synchronize audio and video to reduce audio delay during video playback.

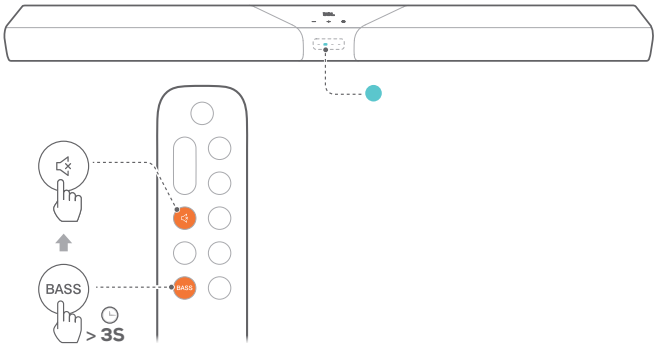


1. On the remote control, hold **/ BASS** for more than 3 seconds, then press within 2 seconds.
   → The status indicator shows the current audio delay setting.
   - White LED (○): the hundreds digit
   - Red LED (●): the tens digit
   - The ones digit is always 0, so there is no LED indication.

   Example: For 140 ms, the white LED flashes once to indicate the hundreds digit (1), and the red LED flashes 4 times to indicate the tens digit (4). If the setting is 0 ms, no LED flashes.
   → When the status indicator becomes solid cyan, you can adjust the audio sync.
2. Within 5 seconds, press **+/–** on the remote control to increase or decrease the audio delay by 10 ms to sync the audio with the video. The adjustable range is from 0 ms to 250 ms.
   → The status indicator flashes cyan once after each adjustment.
3. After setting, repeat step 1 to exit the audio sync mode.
   → The status indicator shows the current audio delay setting, then returns to the last source indication.

NOTE:

– If there is no action for 5 seconds, the soundbar exits the audio sync mode automatically.

9. RESTORE FACTORY SETTINGS

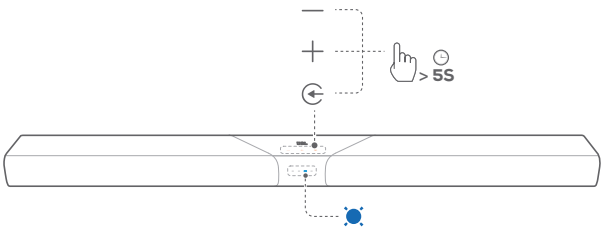


To restore factory settings, hold −, +, and ⏎ buttons together for more than 5 seconds.

→ The status indicator flashes blue slowly until factory reset is complete.

10. RE-CONNECT THE SUBWOOFER

The soundbar and subwoofer are paired at the factory. After power-on, they are paired and connected automatically. In some special cases, you may need to pair them again.

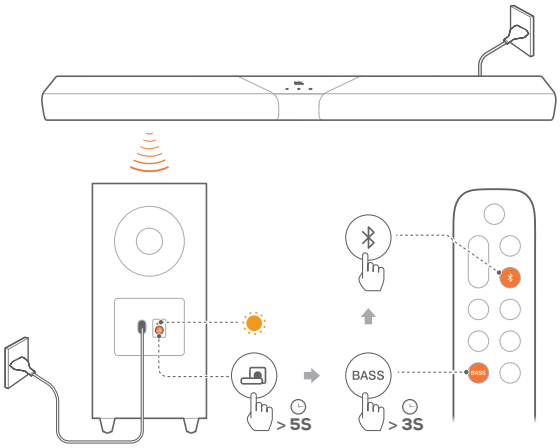

1. On the subwoofer, hold ⏍ until the connection status indicator flashes amber quickly (●).
2. To enter the subwoofer pairing mode on the soundbar, hold **/ BASS** on the remote control for more than 3 seconds, then press ᛒ on the remote control.

   → The subwoofer is connected to the soundbar automatically. **Connected:** The connection status indicator turns solid amber (●).

NOTE:

– If the wireless connection fails again, check if there is a conflict or strong interference (e.g. from an electronic device) around the location. Remove sources of interference and repeat the above procedures.

11. PRODUCT SPECIFICATIONS

General specification:

- Model: CINEMA SB580MK2 (soundbar unit)
  CINEMA SB580MK2 SUB (subwoofer unit)
- Sound system: 3.1 channel
- Power supply: 100 - 240 V AC, 50/60 Hz
- Total speaker output power* (Max. @THD 1%): 440 W
- Soundbar output power** (Max. @THD 1%): 240 W
- Subwoofer output power*** (Max. @THD 1%): 200 W
- Soundbar transducer: 3 x (45 x 100) mm racetrack drivers + 2 x 0.5" (13 mm) tweeters, 1 x 0.6" (16 mm) tweeter
- Subwoofer transducer: 6.5" (165 mm)
- Standby power: < 0.5 W
- Networked standby power: < 2.0 W
- Operating temperature: 0°C - 40 °C

HDMI specification

- HDMI video input: 1
- HDMI video output (with Enhanced Audio Return Channel, eARC): 1
- HDMI HDCP version: 2.3

Audio specification

- Frequency response: 40 Hz - 20 kHz (-6 dB)
- Audio inputs: Optical, Bluetooth

USB specification (for service only)

- USB port: Type A
- USB rating: 5 V DC, 0.5 A

Wireless specification

Soundbar unit

- Bluetooth version: 5.4
- Bluetooth profile: A2DP 1.4, AVRCP 1.6
- Bluetooth transmitter frequency range:
  2400 MHz - 2483.5 MHz
- Bluetooth Max. transmitting power: ≤ 16 dBm (EIRP)
- Bluetooth modulation: GFSK, π/4 DQPSK, 8DPSK

Subwoofer unit

- Bluetooth version: 5.4
- Bluetooth transmitter frequency range:
  2400 MHz - 2483.5 MHz
- Bluetooth Max. transmitting power: ≤ 16 dBm (EIRP)
- Bluetooth modulation: GFSK

Dimensions

- Soundbar dimensions (W x H x D):
  1000 x 62 x 100 mm / 39.4" x 2.4" x 3.9"
- Subwoofer dimensions (W x H x D):
  180 x 395 x 300 mm / 7.1" x 15.5" x 11.8"
- Soundbar weight: 3.0 kg / 6.6 lbs
- Subwoofer weight: 5.3 kg / 11.6 lbs
- Packaging dimensions (W x H x D):
  535 x 345 x 310 mm / 21.0" x 13.6" x 12.2"
- Packaging weight: 10.8 kg / 23.8 lbs (EMEA/UK/AU/NZ);
  10.4 kg / 23.0 lbs (Others)

* RMS @THD 1%: 220 W
** RMS @THD 1%: 120 W
*** RMS @THD 1%: 100 W

12. TROUBLESHOOTING

Never try to repair the product yourself. If you have problems using this product, check the following before you request service.

System

The unit will not turn on.

- Check if the power cord is plugged into power and the soundbar.

The soundbar has no response to button presses.

- Restore the soundbar to factory settings (See "9. RESTORE FACTORY SETTINGS").

Sound

No sound from the soundbar

- Make sure that the soundbar is not muted.
- Select the correct audio input source on the remote control.
- Connect the soundbar to your TV or other devices properly.
- Restore the soundbar to factory settings (See "9. RESTORE FACTORY SETTINGS").

Audio and video are not synchronized.

- Enable the audio sync function to synchronize audio and video (See "8.3 Audio sync").

Distorted sound or echo

- If you play audio from your TV through the soundbar, make sure that your TV is muted or the built-in TV speaker is disabled.

No Dolby Atmos height sound effects

- If your TV supports HDMI ARC only, make sure that you have connected your digital device to the soundbar through the HDMI / **HDMI IN** connector on the soundbar (See "5.1.2 TV (HDMI ARC)").
- Enjoy the sound effects of Dolby Atmos when you play movies from the **TV / HDMI IN** source. For audio streaming over Bluetooth, Dolby Atmos is not supported.

Bluetooth

A device cannot be connected with the soundbar.

- Check if you have enabled Bluetooth on the device.
- If the soundbar has been paired with another Bluetooth device, reset Bluetooth (See "5.2.3 Connect to another Bluetooth device").

Poor audio quality from a connected Bluetooth device

- The Bluetooth reception is poor. Move the source device closer to the soundbar, or remove any obstacle between the source device and the soundbar.

The connected Bluetooth device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the source device closer to the soundbar, or remove any obstacle between the source device and the soundbar.
- For some Bluetooth devices, the Bluetooth connection can be deactivated automatically to save power. This does not indicate any malfunction of the soundbar.

Remote control

The remote control does not work.

- Check if the batteries are drained. If so, replace them with new ones.
- Reduce the distance and angle between the remote control and the soundbar.

Failed to complete the TV remote control learning.

- Check if you are using an infrared TV remote control. IR learning is not supported by Bluetooth TV remote controls.

13. TRADEMARKS



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by HARMAN International Industries, Incorporated is under license. Other trademarks and trade names are those of their respective owners.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2024 Dolby Laboratories. All rights reserved.

HARMAN International Industries,
Incorporated 8500 Balboa Boulevard,
Northridge, CA 91329 USA
www.jbl.com

© 2026 HARMAN International Industries, Incorporated.
All rights reserved.
JBL is a trademark of HARMAN International Industries, Incorporated, registered in the United States and/or other countries. Features, specifications and appearance are subject to change without notice.

HA_JBL_Cinema SB580MK2_OM_Global_EN_V7