

WALL MOUNT.

Brace yourself.




30 minutes



2 people



4 coffees

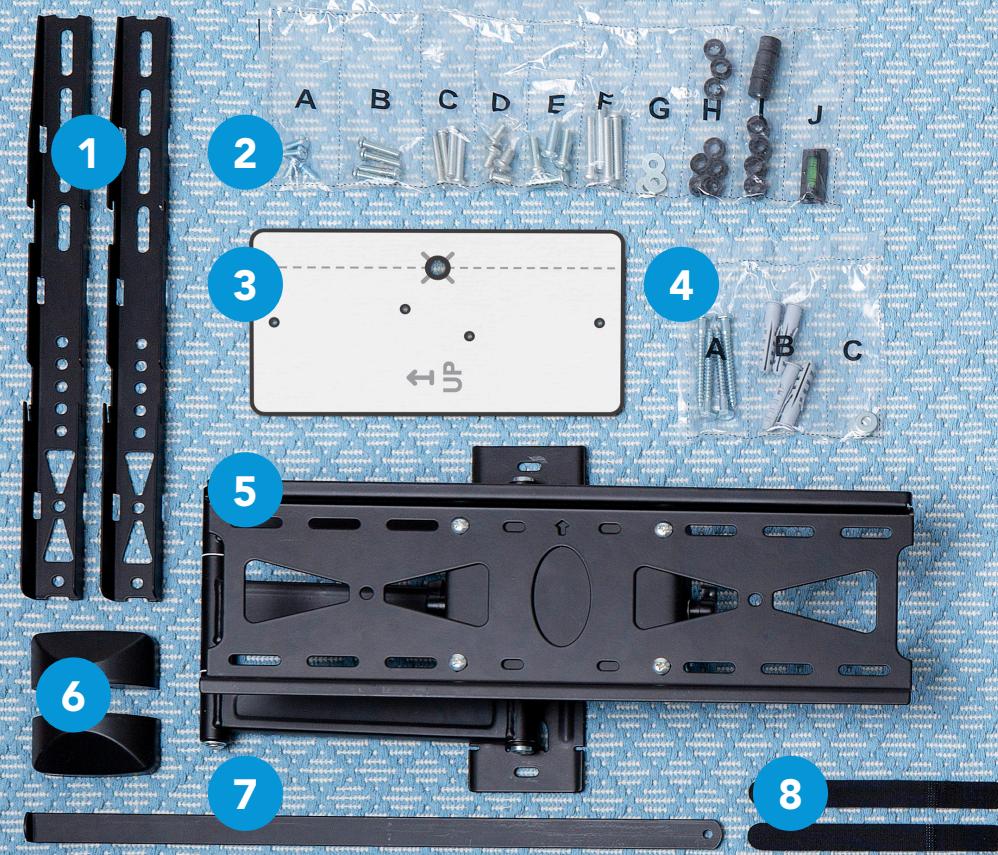

In the box

- 1 TV frames, 2 bag of screws, washers, spacers for the TV, and spirit level,
- 3 a mold, 4 bag of screws and plugs for the wall, 5 wall mount, 6 cover caps,
- 7 securing bar, 8 velcro for your cables.

Your own tools

- 9 Open-end or socket wrench 11mm, 10 cross-head screwdriver, 11 pipe locator,
- 12 5mm drill, 13 10mm drill, 14 pencil, 15 hammer, 16 tape measure,
- 17 impact or concrete drill 18 a lovely blanket to place everything on.

CHECKLIST.

You're 50% there.



Suitable surface area:

- ✓ Solid brick
- ✓ Solid concrete



Prior to drilling

Use the pipe locator to check if there aren't any pipes or cables behind the wall.



Tilting the TV

Use the dials on the sides of the wall mount to tilt the TV when it's hanging on the wall.



Need help?

Call 010 798 89 99 or visit
Coolblue.nl/en/customer-service

Coolblue isn't liable for any damage, accidents, or arguments with boy/girlfriends as a result of incorrect installation. Not sure if you can do this on your own? Ask a skilled installation expert for advice.

A Coolblue brand
Coolblue.nl/BlueBuilt



CBL1163

1. PLACE THE FRAMES



Place your TV on a blanket and place the **TV frames** 1 on your TV as pictured.

Look in bags **A through F** 2 for the screw that fits your TV. You only need 1 set of screws.

2. INSTALL THE FRAMES



Secure 1 screw. Extra space? Place **washer** (G) or **spacer** (H or I) in between.

Now secure the other 3 screws in the same way.

3. MARK DOWN THE WALL



Draw an X on the wall where the middle of the TV should align.

Place the **mold** 3 on the wall so you can see the X you've just drawn using the marker 4 and draw the drill holes using the **spirit level** (J).

4. DRILL



Drill with precision by first using the 5mm drill, and then the 10mm drill. Drill as deep as the **screws** 4 are in length.

Hammer de **plugs** 4 into the drill holes.

5. INSTALL THE WALL MOUNT



Screw the **wall mount** 5 to the wall with the **washers** 4 in between.

Place the **cover caps** 6 on the wall mount.

Lift the TV with 2 people and attach it to the wall mount.

6. SECURE THE WALL MOUNT



Place the **securing bar** 7 in the opening on the bottom of the frames.

Done! Pat yourself on the back, turn on the TV, and bask in the glory of your accomplishment.