



ALIGN TOP OF IPHONE WITH TOP
OF DECODED CASE

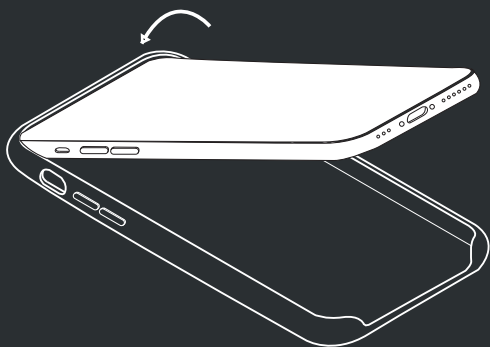

SNAP DOWN SLOWLY TO SECURE
VOLUME/ POWER BUTTONS IN
PLACE AT SAME TIME

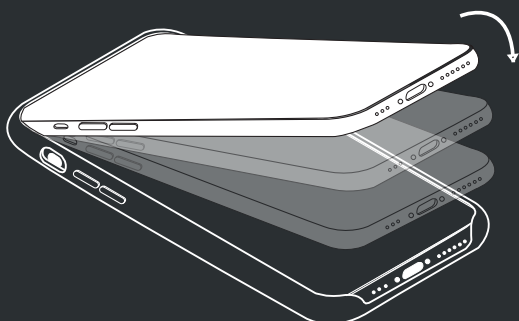

SECURE AND SNAP ALL CORNERS

DECODED